

Note: If you're reading this in PDF Format, please keep in mind it was sourced from a presentation and there are queue's to click listed in the notes that would trigger animations in the presentation. Please ignore these queues in the following notes.

About Presenter:

Rick Stehmeyer is a senior engineer at Cx Associates in Burlington, Vermont.

Started in 2002 => 18 years in the biz

<Click>



I studied computer science in college when computers looked like this.

which makes me feel like this today <click>

I applied for an internship at a controls company right next to my college campus and happened have a natural talent for programming installing these <next>




And I caught the HVAC bug working there

I am the only LONworks Certified professional in Vermont (only guy to take the test).

I have integrated these in R2 and Ax through proprietary drivers and open system communications protocols.

In my time I have programmed, installed and maintained the following controls products directly <click>

Barber Coleman DMS, Network 8000, and IA series controls (now owned by SE)
Johnson Fx Controls (legacy and current gen)
Honeywell Spyders
Alerton
Reliable Controls
Distech
Tridium Jaces through Niagara Ax

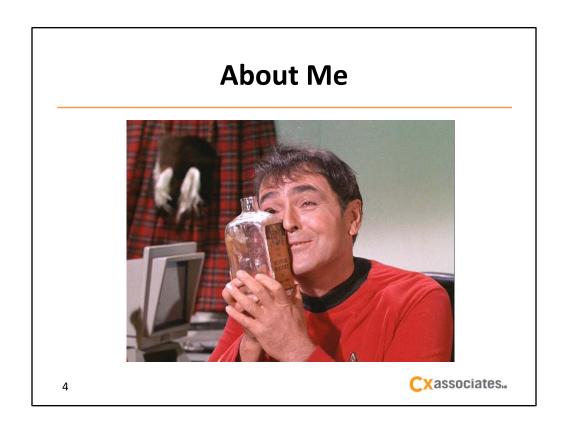

And now I am the most dangerous of all professions in the HVAC industry <click>
An engineer

Presentation Overview

- · Big Picture
- Fanny Allen 2015
 - Design Process
 - Guideline 36's implementation
- Fanny Allen 2016
 - Construction Process
 - Guideline 36 installed in Vermont
- Fanny Allen 2020
 - Current Facility Operation
 - How much Guideline 36 is still in operation



In this presentation we originally had a representative from the control's contractor and the hospital as co-presenters. But life happens and they cannot be here today.

plan on telling the story of the Fanny Allen Hospital BAS upgrade.


Within this story I'll talk about Guideline 36.

I will refer to it as "the guideline" or GL36 through our this presentation.

We'll talk about UVMMC's Fanny Allen Hospital

We'll start Fanny's story with the BAS upgrade design and make our way to current day.

But lets start at the very very beginning

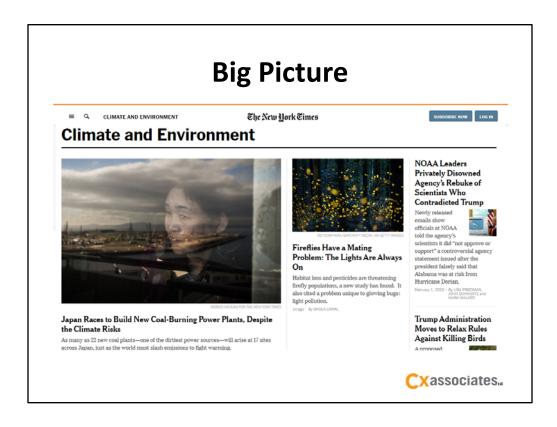


why are we here today?

I hope you are sitting here because you're concerned with climate and the environment.


Yesterday (2/4/2020 the NY Times reported that Japan will build 22 coal power plants in the near future.

This breaks my heart.

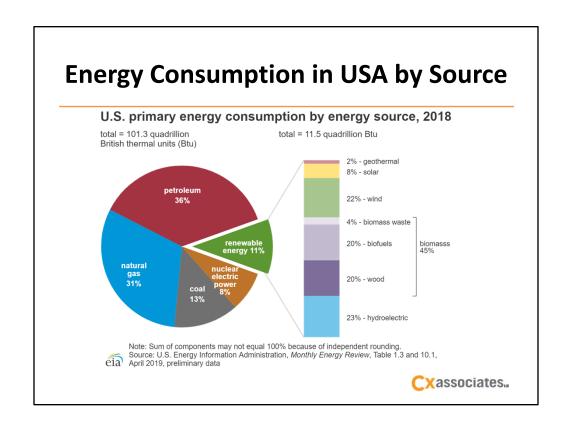

Overall in the United states, energy consumption for 2018 was majority fossil fuel!

Renewables are 11%

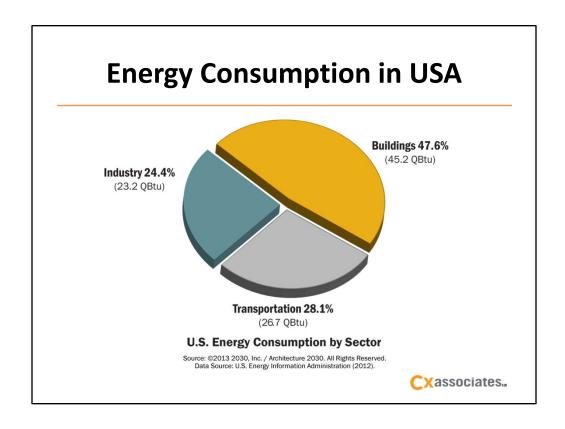


In 2013 the EIA reports that buildings are 47.6% of US energy Consumption


Buildings are 47%! That's our 47% here at BBBD

We own that in this room.

We own the responsibility for shrinking it.

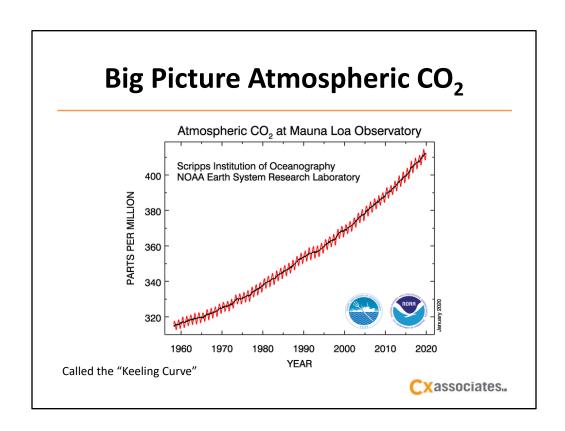

This is Atmospheric CO2 in my parent's lifetime. My parents are still kicking and haven't even retired yet.

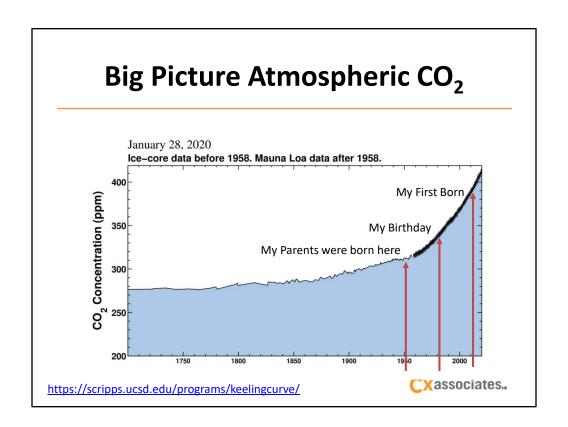

Here is its since the year 1700.

The dark black is the previous graph.

Here are three generations of Stehmeyer on this graph.



I love star trek. (Lots of it here in this presentation)

Star trek showed a future without social injustice, greed, money, and poverty. A future where we learn from our mistakes.

A future where humans made decisions by studying problems using the scientific method and arriving conclusions that turned into actions.


In 1993 there was an episode where they find out warp speed travel damages space.

It destroys the "environment" of space so to speak.

Picard at the end of the episode says to Geordi

that he has spent his entire life traveling space to learn about it and all that time he has been damaging the thing he holds most dear.

Geordi reassures him that "we still have time"

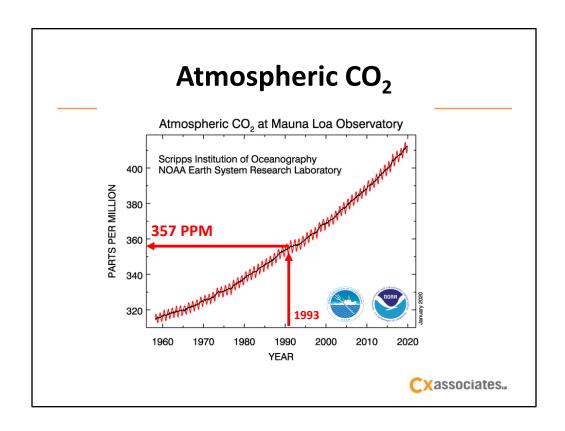


I was 12 years old in 1993 we knew the CO2 was rising because of humans. We made the characters of star trek address it then and sent a message to impressionable young viewers.

We knew why.


It was at 357 PPM

Here in the future, in 2020, we are out of time.

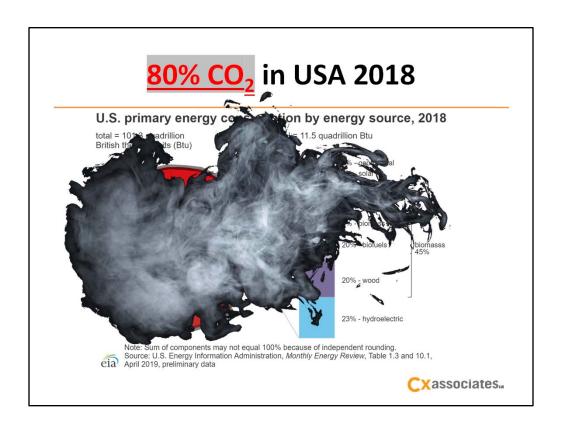

In 2018, 80% of this graph is carbon emitting.

That's disgusting.

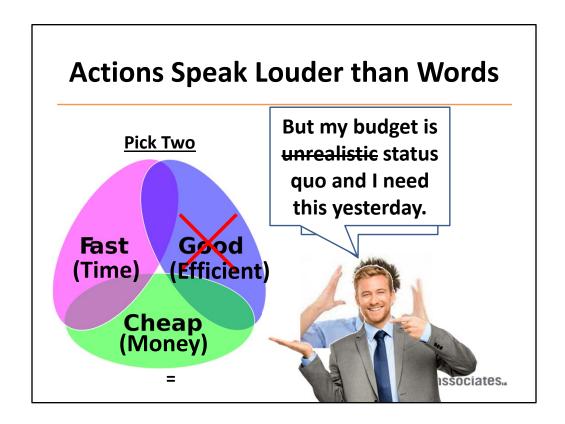

As a commissioning agent I deal with the construction industry daily.

In design, construction, and building upkeep we are bound to budgets and timelines.

We want buildings to be built better by design. We want buildings to be efficient. But that comes at a significant first cost compared to the 2020 status quo. <Click?

Last year I had two clients start LEED design projects and cancel them before the design was finished. Can you guess why the "LEED" component was canceled?

The reality is that <u>Efficiency</u> takes <u>time</u> and <u>money</u>. If you don't have both, you're not going to hit the target efficiency you're looking for because time is money. (click)


Which is why what I am going to show you with Fanny took <u>time</u> and <u>money</u> to get to good. It was not a quick project and it wasn't a cheap upgrade.

That being said, its an investment in efficiency that pays back over time, which we know is money.



We all are responsible for this future we know we are creating for ourselves.

If you've not made this a daily thought or priority – in personal life or as a business participant, you must start now.

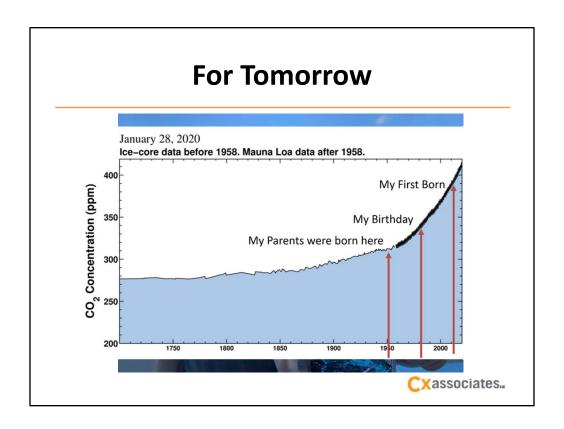

Last slide on this, I promise.

My 8 year old and 5 year old have no idea how bad it is right now.

When they're my age, I hope they will be able to say that their parents never stopped trying to prevent the climate.

Its time for each of us to use our unique positions, abilities and resources to stop this problem NOW.

We need to change the way its always been done. Its going to be inconvenient, and expensive, but you can't eat money so it's an investment we must make for our children and ourselves.



Guideline 36 is hard.


Its complicated.

Its expensive BECAUSE its not the way we've always done it.

When we make it the way, it will no longer be expensive, because it will be copy paste tweak.

We want to save energy. That means working harder and using systems smarter.

Image Source: https://pbs.twimg.com/media/CoDZrP8XEAEydEK.jpg

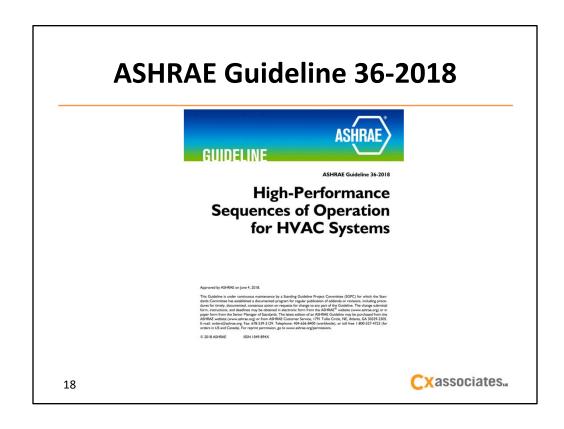

So we are going to choose the new way, the harder way. For the sake of our future and to make buildings better by design.

Image Source: https://pbs.twimg.com/media/CoDZrP8XEAEydEK.jpg

PURPOSE!

1. PURPOSE

The purpose of this guideline is to provide uniform sequences of operation for heating, ventilating, and airconditioning (HVAC) systems that are intended to maximize HVAC system energy efficiency and performance, provide control stability, and allow for real-time fault detection and diagnostics.

- · Reduce Engineering time
- · Reduce Programming and Commissioning time
- Reduce Energy Consumption
- · Improve Indoor Air Quality
- Reduce System Downtime by Including Fault Detection Diagnostic Algorithms
- Provide a Common Language of Terms to facilitate communications between specifiers, contractors, and operators


19



Purpose: Provide <u>uniform</u> sequences of operation for HVAC systems that are intended to maximize HVAC system energy efficiency,

- · performance,
- · provide control stability,
- and allow real-time fault detection and diagnostics

Basically the guideline provides unified technical techniques and terminology with the goal of reducing time for everybody.

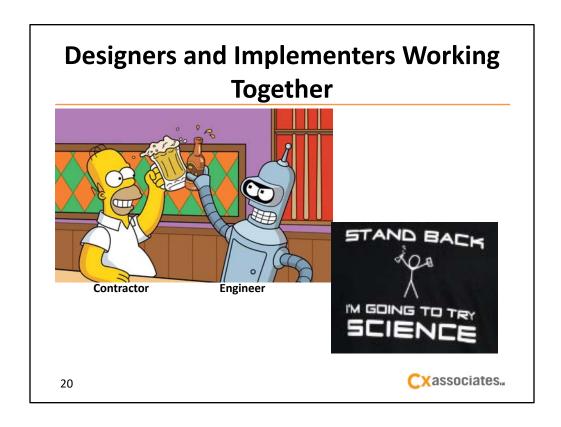

The end goal is to reduce time for both design engineers and control contractors by uniting them under common practice while advancing the state of the art.

This wont happen overnight, it needs ADOPTION by the design community. This only happens when customers ask for it.

In the future, the ideal situation is that controls manufacturers will adopt Guideline 36 like they did BACnet and provide tools for their dealer networks to easily provide, modify, and configure these pre-programmed sequences.

RP 1587 - Control Loop Performance Assessment

Information for the Design Engineer

Notes in italics between thin lines provide guidance or additional information about specific sequences.

These notes are not a part of this guideline. They are merely informative and do not contain requirements necessary for conformance to the guideline.

Notes in bold between thick lines provide direction to the editor of these sequences so that they are properly implemented (e.g., identifying mutually exclusive options).

21



The guideline really speaks to you in various ways.

One is the Italicized notes to the reader (you) that provide context into what and why we're asking you to do these things listed in the sequence.

The other is the bold notes which are the choose your own adventure decisions every engineer must make in design. <Click>

Choose your own adventure

The engineer must select between ventilation logic options:


- If the project is to comply with ASHRAE Standard 62.1 ventilation requirements, keep subsection (a) and delete subsection (b).
- If the project is to comply with California Title 24 ventilation requirements, keep subsection (b) and delete subsection (a).



22




For example here you can see that we need to pick between AHSRAE standard 62.1 and California Title 24 and use the appropriate sequence for the applicable codes in your area.

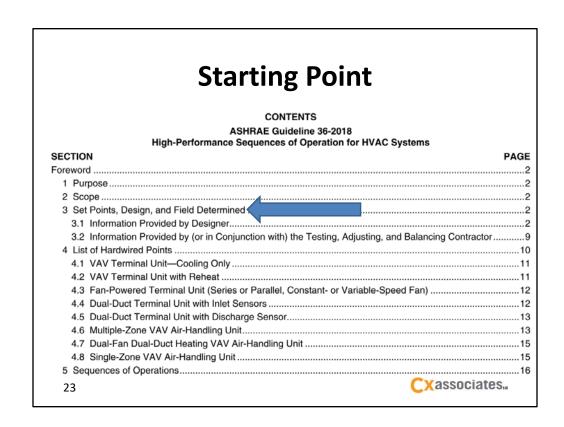

Right off the guideline starts by defining setpoints and design variables that the designer needs to consider.

Although the setpoints may be changed during the construction verification process on your project, they should be included in your design documentation and customized for your project's needs.

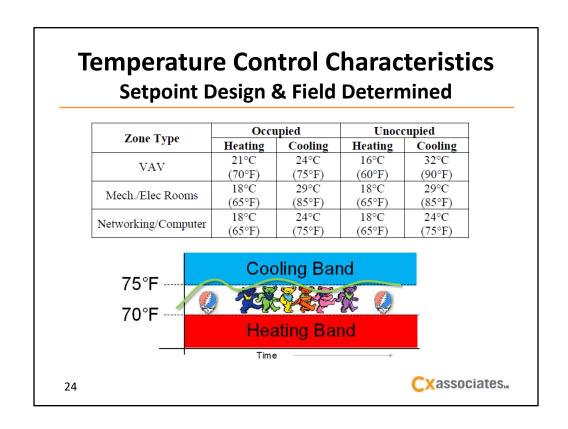

The guideline then provides you some starting suggested setpoints.

Notice the 5°F deadband? <click>

Nice right?

Multiple Zone VAV AHUs Setpoint Design & Field Determined


Instructions for establishing MinDP are given in the Test and Balance Specification. For example:

- 1) Open the minimum outdoor air damper and return air damper fully; close the economizer outdoor air damper.
- 2) Measure outdoor airflow.
- 3) If outdoor airflow rate is above design minimum (DesVot for ASHRAE Standard 62.1 or DesMinOA for California Title 24, adjust damper linkage on minimum outdoor air damper so that intake is at design minimum with damper fully stroked.
- 4) If outdoor girflow rate is below design minimum, temporarily adjust return

25




They even include language on what to include in the T&B specification

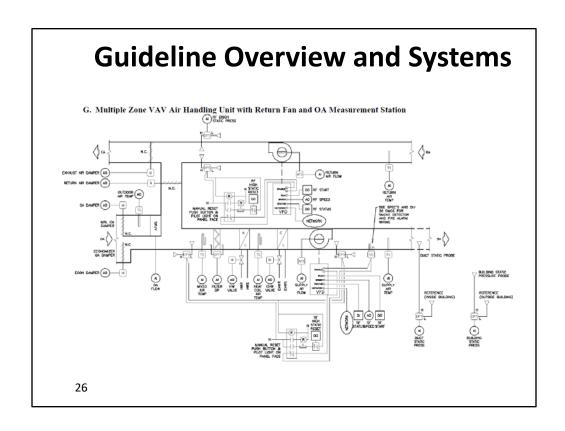

They not only provide sequences, but also layouts for equipment, we'll get into this more later in the presentation when we talk about... <click>


Image Source: GPC36 PPR1 05-16-2016

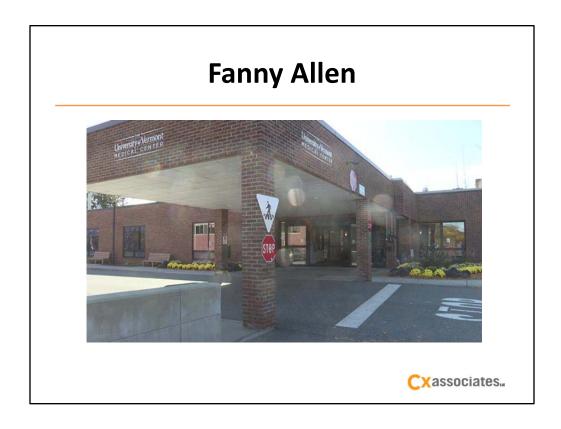

Fanny.

Fanny Allen hospital is in Colchester and is part of the UVMMC family.

In 2015 Cx Associates was contracted to design a comprehensive BAS upgrade for the facility.

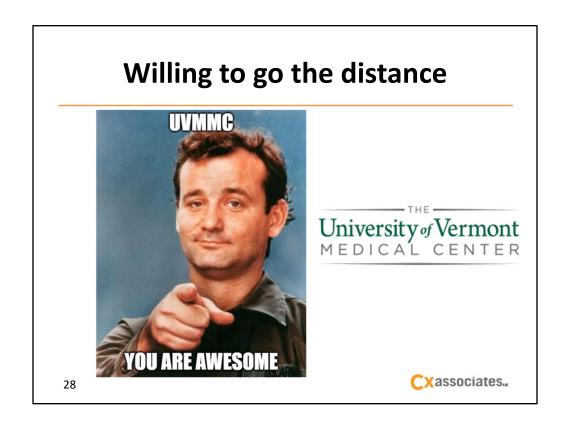


I'd like to acknowledge that UVMMC is very committed to taking the time and putting the effort into energy efficiency.

Nobody forced them to take the hard road, or budget for a more expensive approach to a BAS upgrade.

From the beginning they were committed to doing the hard thing, investing both time and money into their building to make it the most efficient that it could be.

This first cost will pay off over the life of the building.

They knowingly chose to do it better than the way its always been done.

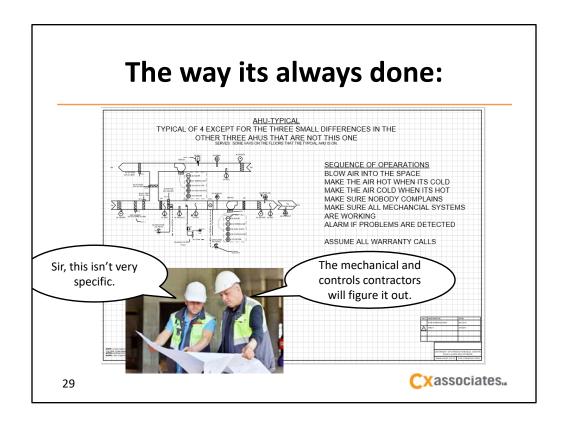

Often times controls contractors are the last to get started as their work is predicated on the other trades being completed


They are under tight budgets that result in low bid pricing battles.

They also are generally given poor direction and are the ones left to "Make it work". This too can impact the race to the bottom for pricing.


In these situations, you commonly hear: "that wasn't specified, we'll need a change order"

Not at Fanny Allen. They were made part of a team, they had input and helped out. They were given the time and the resources they needed to get the job right.


Image Source: https://pbs.twimg.com/media/CoDZrP8XEAEydEK.jpg

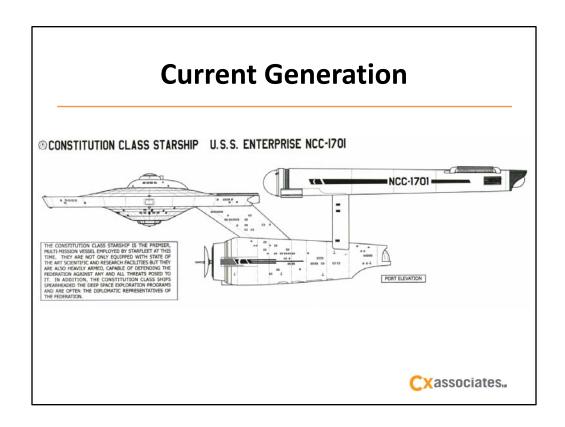

They too brought way things have been done, <click>

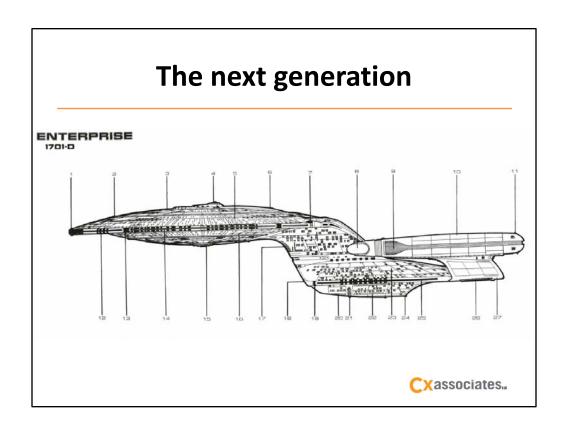

to the next generation <click>

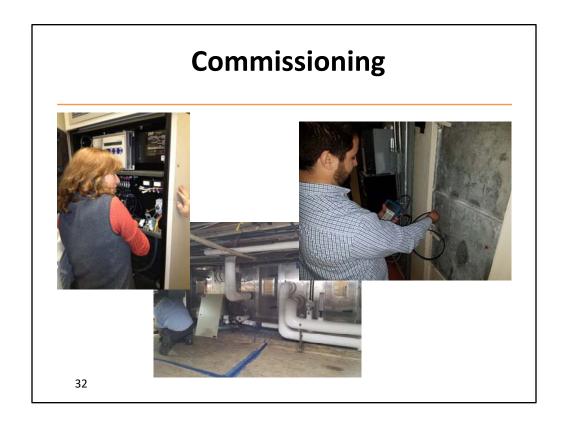


UVMMC was committed to 3rd party commissioning for this project.

This is a must with Guideline 36 because



Initially GL36 was verified on the west coast.

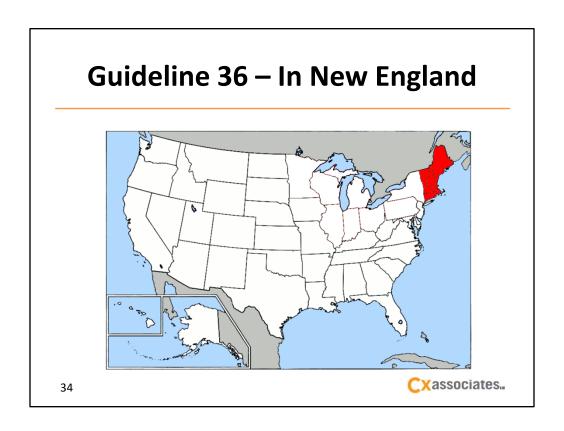

So at the time we had to translate those sequences of operation to northern New England,

you can't take everything for granted.



The team spent the time during design to put on our thinking caps and evolve status quo HVAC control sequences

Guideline 36 – An Evolution



36

If we take cars for example.

Cars have evolved their status quo.

In the 70s, the dashboard were simple.

There was very little information provided to the driver.


They were inefficient too.

Guideline 36 – An Evolution




37

In the '80s, more information is available, and efficiencies are better

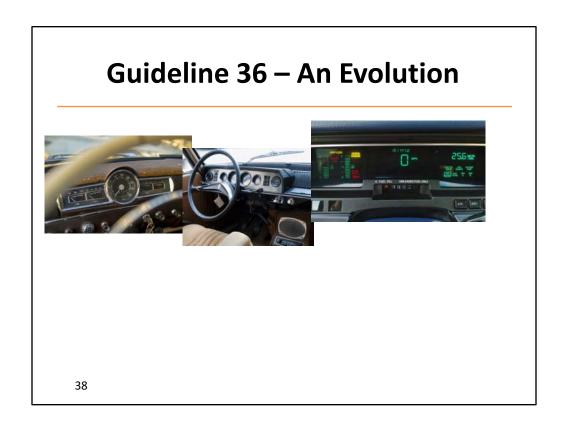

This trend continues (you must normalize MPG for increased number of cylinders, larger cylinder displacement, increased HP, increased torque between the early 90's and mid 2000's)

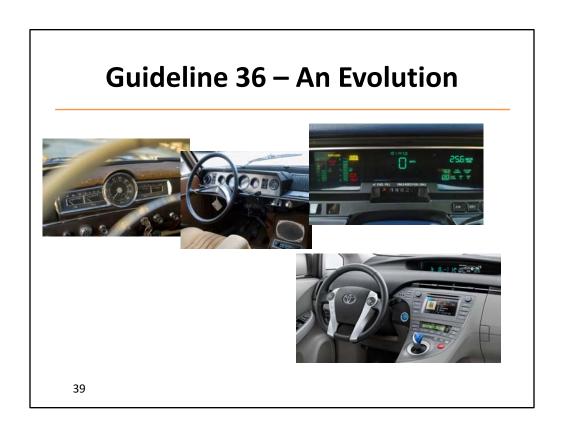



until you get to the zero emission Tesla.

Tons of information is available and there is no tailpipe.

Engines have gotten more complicated with more parts. There are more electronics. As cars have become more efficient, they have become much more complex.

Guideline 36

THIS IS IMPORTANT

41




Guideline 36

THIS IS IMPORTANT GL 36 is NOT a car


42



Unlike a car, to make a typical AHU more efficient, the only hardware you MIGHT have to add is...

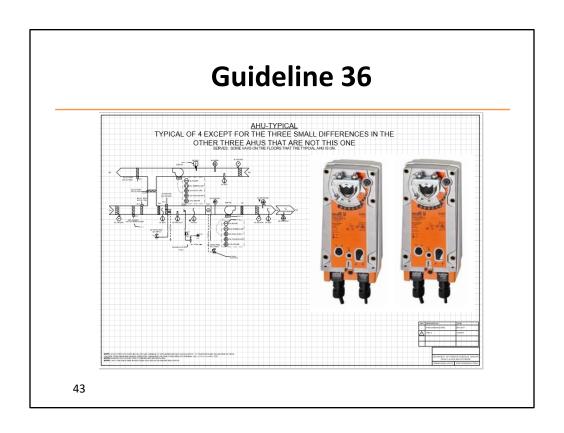

two damper actuators and (click)

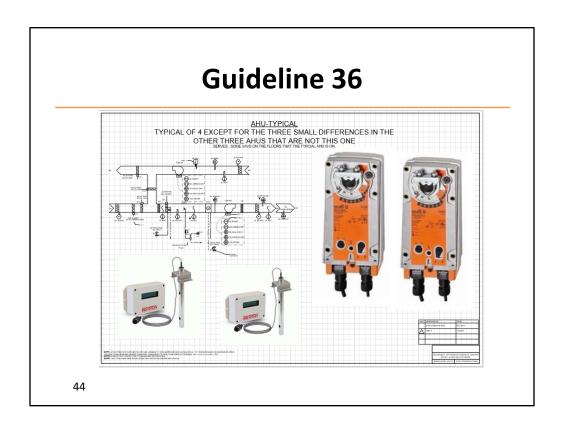

Two air flow stations. That's it! All the gains that GL 36 gives us are done with more thoughtful applications of sequences of operation including better use (or the use at all) of available information.


Guideline 36

• Efficiency through smart sequences of operation.




45

Efficiency through smart sequences of operation. (Click)

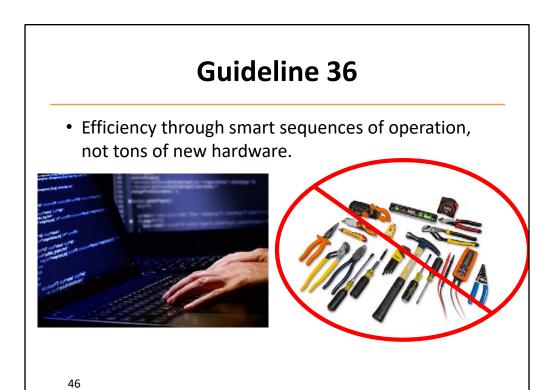

Not tons of new hardware

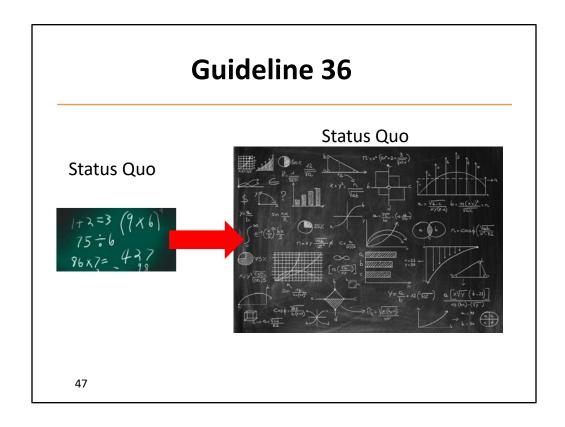

Sequences are more complex and more involved than the status quo,

They require more programming, and more verification because more is done in software.

This requires better graphics.

This requires people to step up, step outside the comfort zone, and get to know something more complex.

Guideline 36 – Design and Commission It!

- Efficiency through smart sequences of operation, not tons of new hardware.
- Sequences are more complex and more involved than the status quo.
- 3rd party verification is a must.
 - Independent commissioning should be included to ensure the implementation matches the design

48



Guideline 36 – Design and Commission It!

• Smart sequences, complex controls require thoughtful planning.



49

Cxassociates...

You need a designer with pertinent experience and expertise.

You need to allow TIME TO COMPLETE THE DESIGN – The FAH project required an exhaustive survey of the building as a starting point.

You need to be willing to consider the best proposal for the work, NOT THE CHEAPEST.



There are just some areas where folks see the value in paying more upfront.

Buildings need to be in this mindset for all of us moving forward as they can have tremendous environmental impacts.

Guideline 36 – Design and Commission It!

• Engineered documents allow for review and critique BEFORE installation.




51

Cxassociates...

You MUST allow time for at least one thorough review prior to finishing the design. A qualified 3rd party Cx Agent should be involved, but at a minimum you and your operating staff need to have input.

Why all this planning? <click>

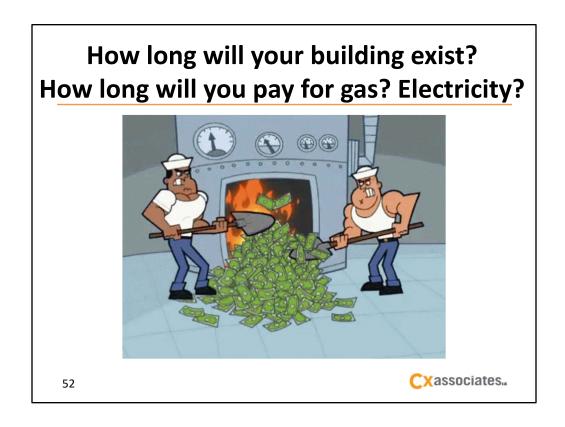


\$1 spent during design = \$100 during construction = \$10,000 over the lifetime of the building.

A cheap design is affordable today, but will incur cost for the next 20 years.

How many people want to heat their building for <u>more money</u> over the next 10 years to save a few bucks on their design today?

Well we, as a species, are notoriously bad at planning for our future. This is echoed in our building design choices.

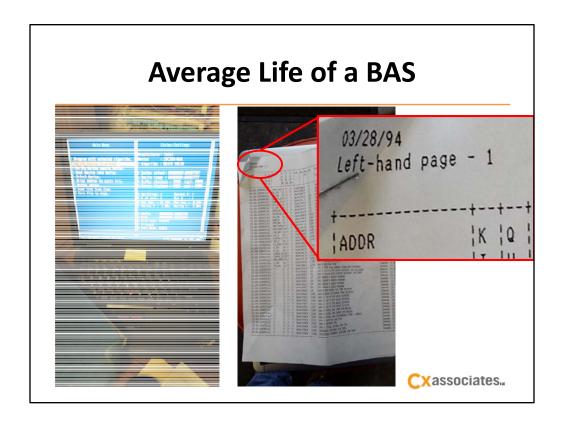


When UVMMC decided to upgrade the BAS, the system was over 20 years old.


It was installed in the early 90s.

These systems were so old, they had to keep old laptops around to modify them. This is not uncommon in the controls industry.


This BAS was old enough to serve in our military <click>,

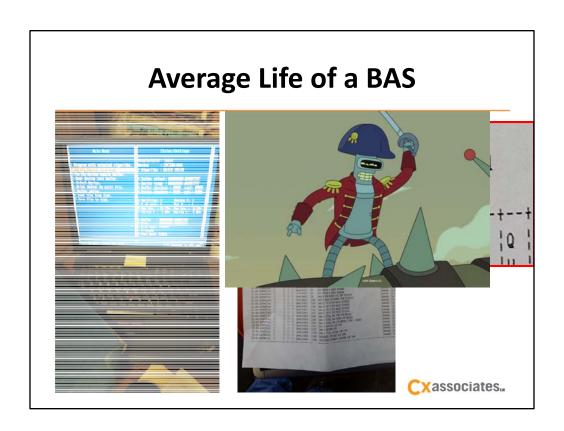

vote <click>

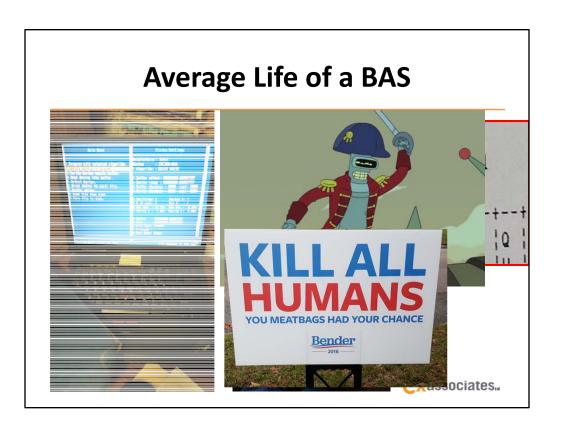

, and drink beer <click>

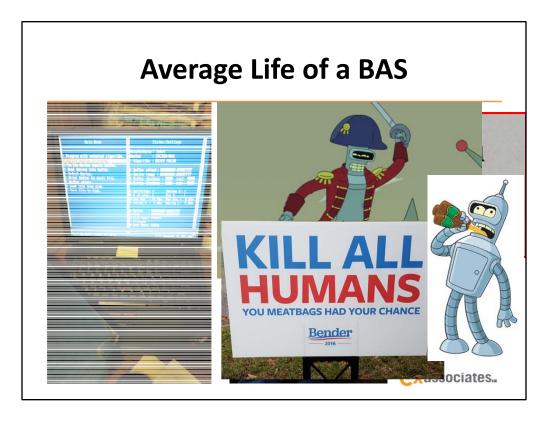


when it was replaced.

It ran 24/7 for over 20 years. You don't ask your car to do that.

UVMMC & Fanny Allen got their moneys worth from that system and then some.

This is why UVMMC knew that they should go the distance with the new system to get the same value out of it.

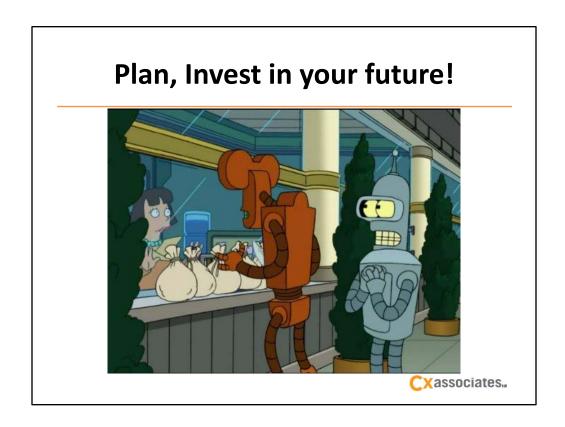


So when you hear someone cry foul about <u>expensive</u> BAS Systems, remember that most live for more than 20 years if maintained (and some cases even if its not maintained).

Also if your BAS is 15 years old, start saving capital for the next 5 years to purchase its replacement.


Have a plan. Take your time for good design. Upgrades can be phased to match budgets IF planning is done ahead of time.

Then a building can end up with a complex efficient system, without doing everything at once.

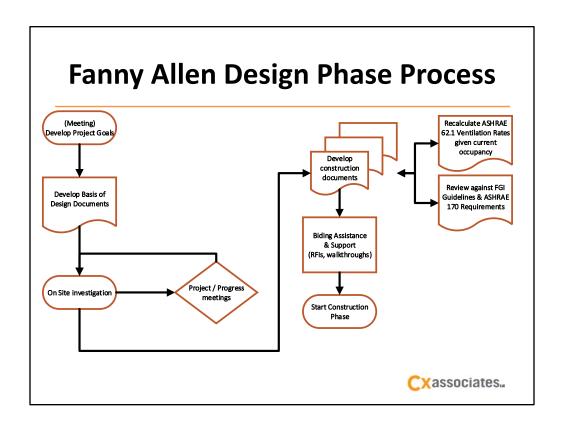

We stared a design for the BAS, we had a plan.

This is just the Design Phase

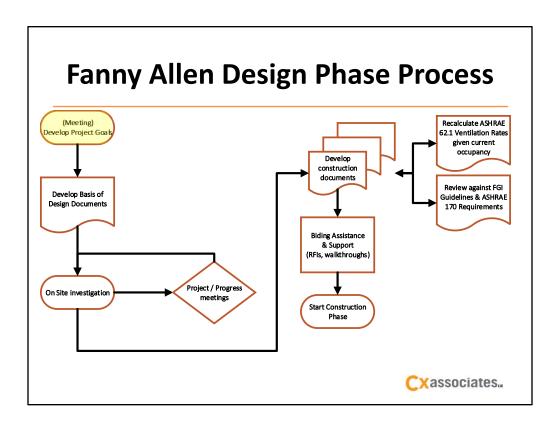


We started the design by interviewing the stakeholders:


UVMMC Project management

UVMMC Facilities management


What they wanted from this upgrade. We guided them through developing project goals.

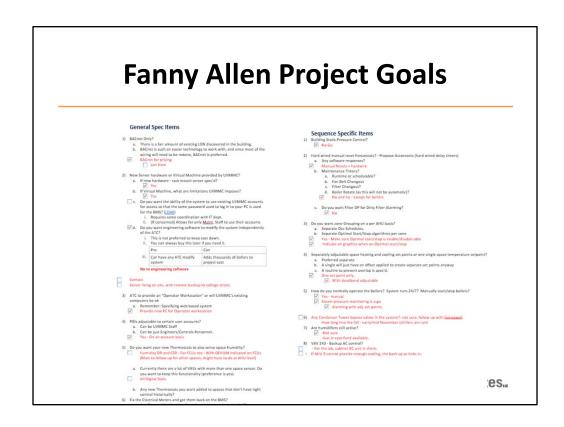

This was essentially an interview detailing what they would like to see improved, added, and modified.

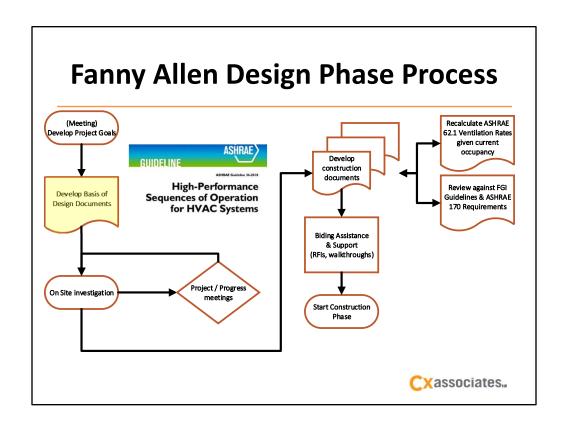

Then we developed a basis of design based on ASHRAE Guideline 36's current draft and the ownership input.

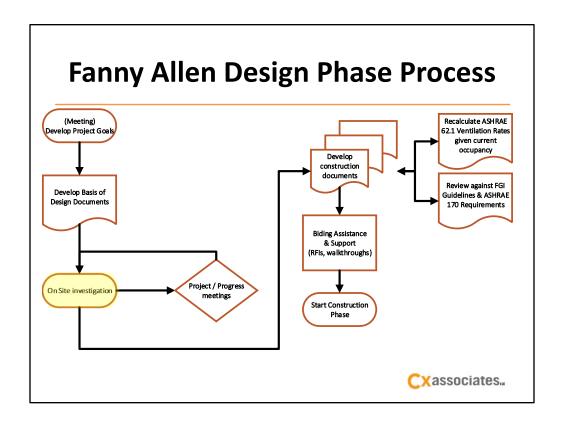


The next phase of the design required a detailed-on site investigation because the building was so old there was no good set of as-built drawings.

No one set of drawings contained a complete view of the MEP systems.

Hospitals are amalgamations of additions over long periods of time, and the drawings sets only focus on the section being added.




So we spent weeks on site with our team crawling through ceilings, chasing pipes and duct, and looking at equipment.

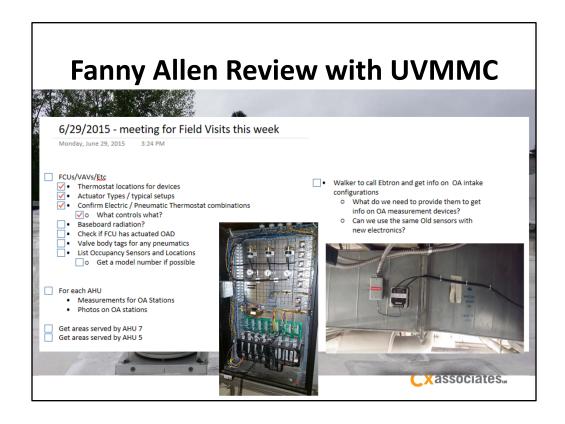

During that time we had periodic meetings with Fanny's facilities team to ask questions about operations and how things behaved.

We created a detailed list of mechanical deficiencies and issues that would hinder the BAS controls from being able to provide the most value.

UVMMC budgeted a healthy contingency for all the MEP deficiencies so that they could repair equipment or systems found not to be 100% functional.

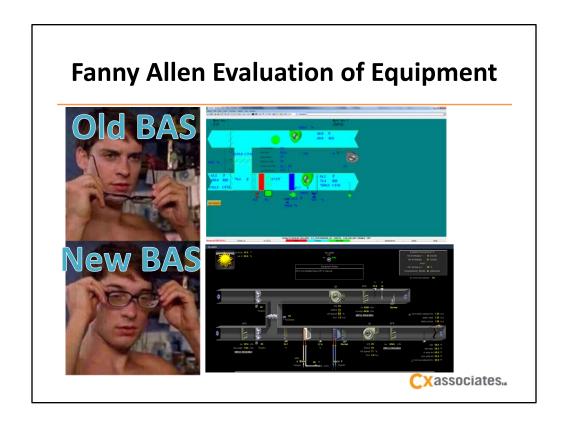


Both UVMMC and CxA knew that a BAS is only as good as the mechanical equipment its controlling.

For any BAS upgrades, in any building, you will typically add more sensors and replace old inaccurate ones. Trending will be improved; response times will be improved.


The new BAS allows users see their existing mechanical equipment more clearly, and therefore makes the mechanical issues more visible

We wanted to try to get ahead this as much as possible to inform UVMMC.

So they could plan their contingency budget.

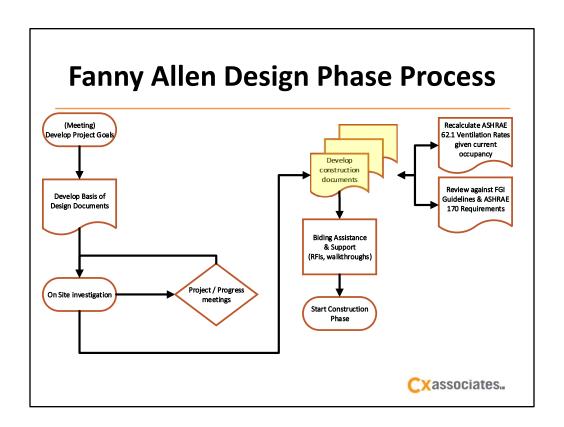

From all that site work and preparation between the customer and ourselves, we were able to develop a comprehensive view of the equipment, the spaces, and their uses.

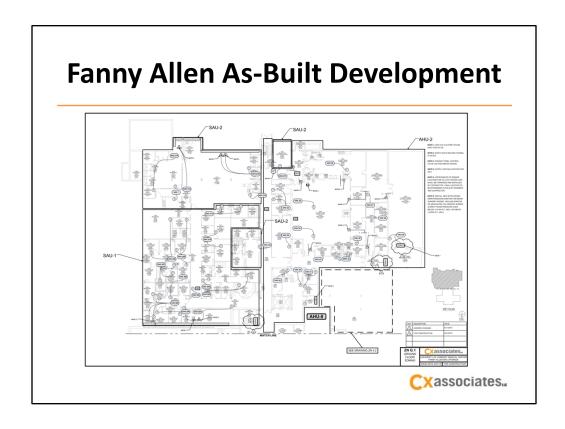


This drawing set is now the *goto* set for the facilities team.

This was not a fast or inexpensive.


Remember Time = Money

However the payback on this investment is immeasurable if you consider the time it saves their staff today.


This was also very important to the design efforts because <click>

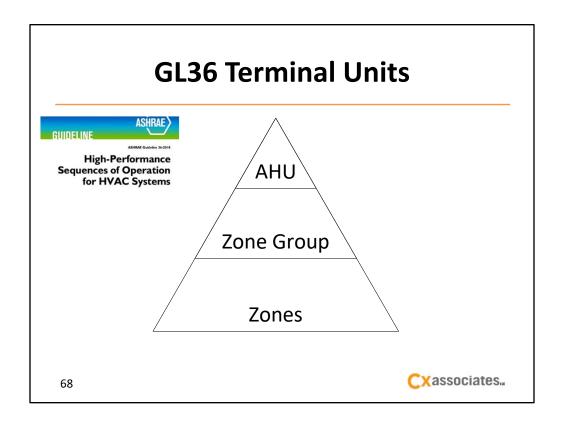

The Guideline builds on a common theme of hierarchy's

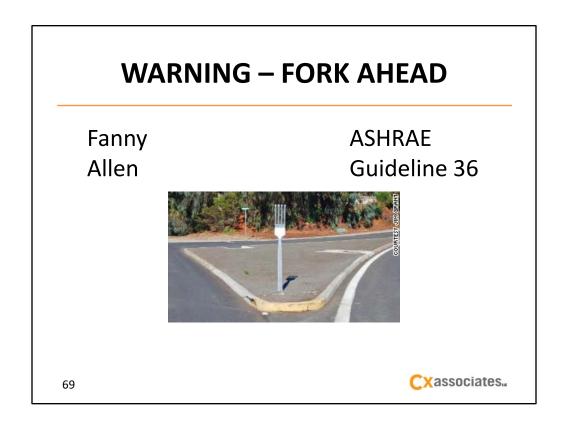

Just a heads up, we're going to get into some of the guideline here, we'll come back to Fanny in a moment.

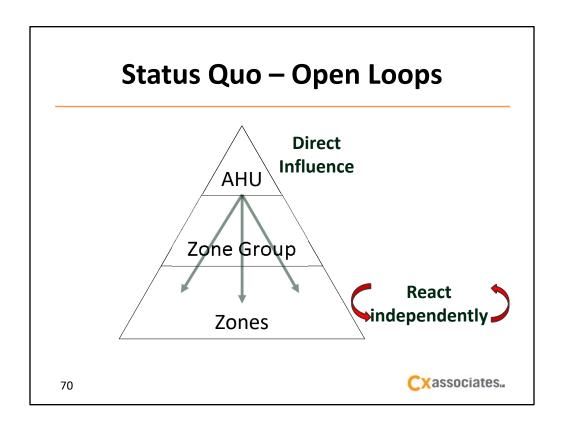

Status Quo sequences generally treat each of these systems as independent.


Of course they are connected mechanically,

but industry standard sequences generally make the AHU's provide what they're going to provide


and the zones react independently.

In this setup, the AHU drives the zones. The zones react.


This is open loop control

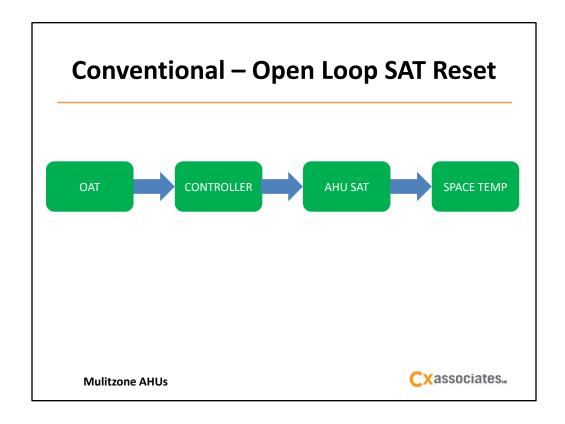

A common example of open loop control is Outside air reset.

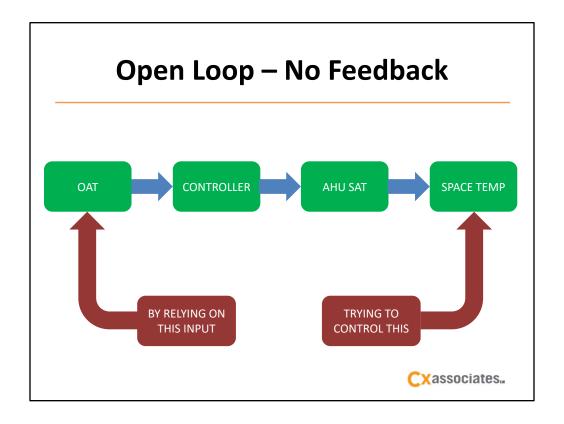

By looking at the current OAT, a design engineer assumes what the impact on the space will be.

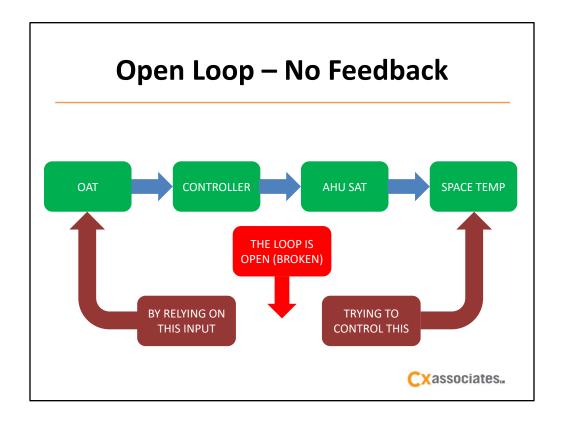


You can see that Open loop controls do not use a feedback


from the process (space temp)

to inform what they are doing.

This is an old sequence from when building envelopes were poor.

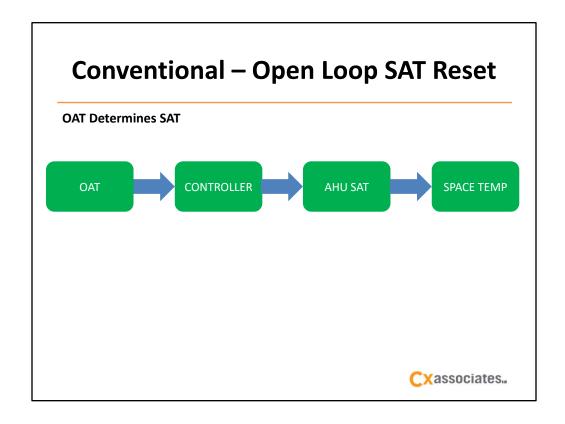


This was the old way. How do we make it better?

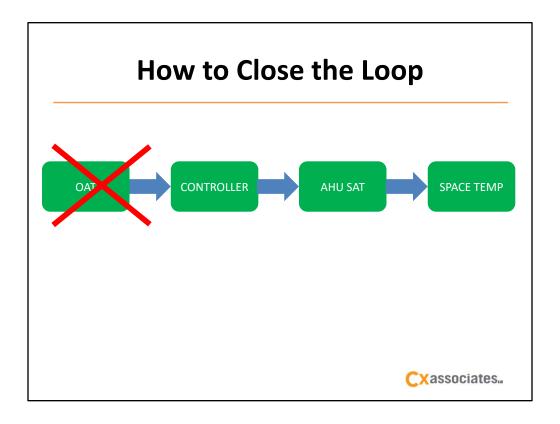

Remove the input that doesn't know anything about the final output of the control loop.


We need to provide the controller with a new input that is affected by the controller output.

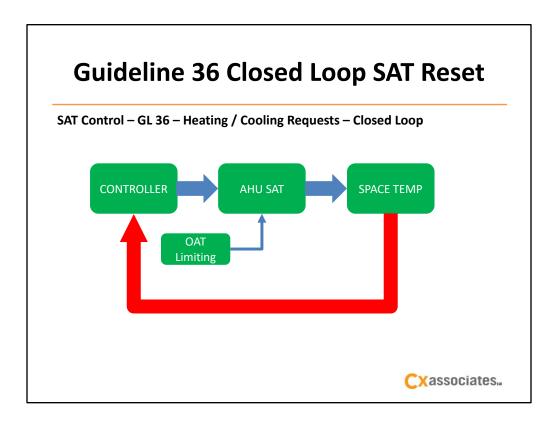

Allow the output we want controlled (the space) to tell the controller what to do.

The Guideline also still allows OAT to impact the reset limits, but the reset itself is based entirely on space temperature heating / cooling requests.


OA is still INFLUENCING the load; it's just not directly controlling the H/C delivered to the space

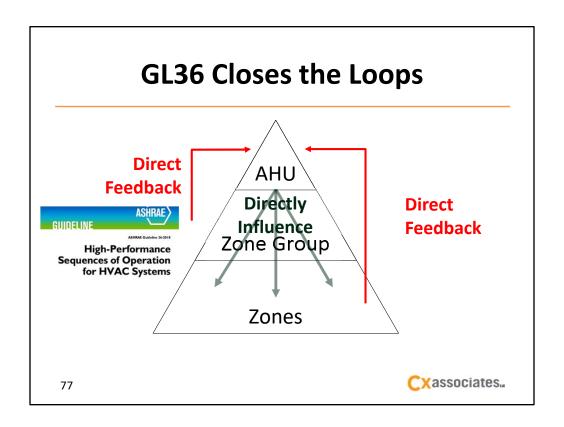

In Guideline 36 each zone directly send signals up to the equipment feeding it which have an impact on the AHUs, and hydronic plants serving them.

This closes the control loop

This concept includes Thermal, ventilation, pressure, alarming.

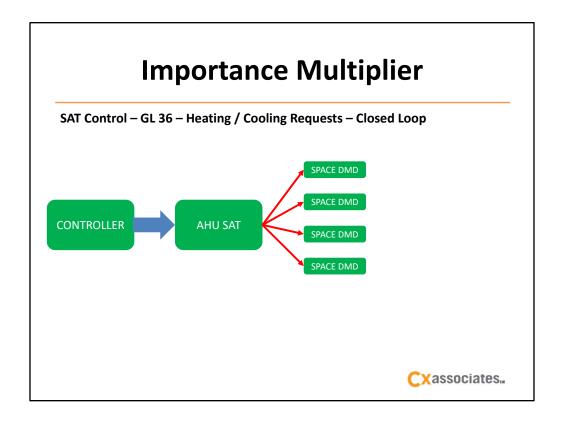


Now we go a step further, this is how the zone send signals up to the equipment feeding it.

Every AHU serves multiple spaces.

Some of those spaces are more important than others.

Some are larger, some are more critical, etc.

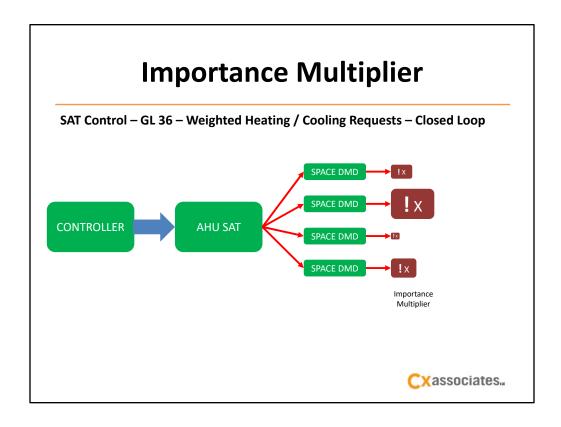


We assign each space an "importance multiplier". In the GL, these are numbers between 0 and 1 by default.


If a zone requires more importance you can go above 1 increasing the number of requests a zone generates.

If a zone shouldn't impact upstream AHUs / Plant equipment you can set the multiplier to 0 causing it to be ignored.


These multipliers are used to add weight Heating / Cooling Requests passed up to the AHUs or Central Plant equipment.

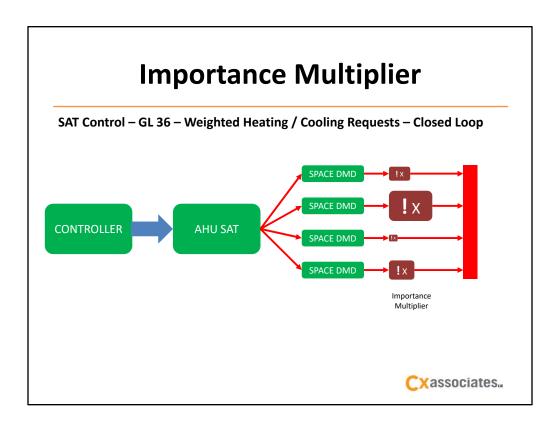

All the space temperature demands are multiplied by their importance multiplier. Those values are summed and...

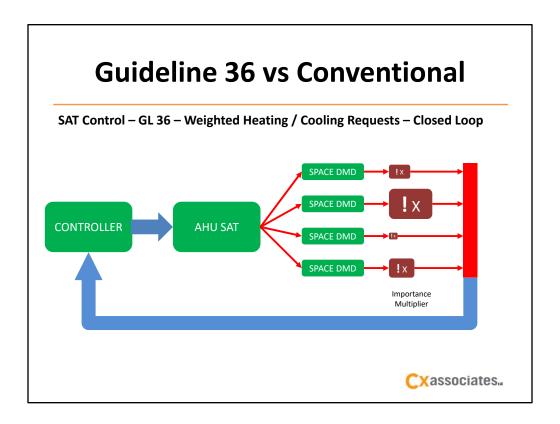


Sent back to the controller where the SPACE DEMAND, not OAT, determines the supply air temperature.

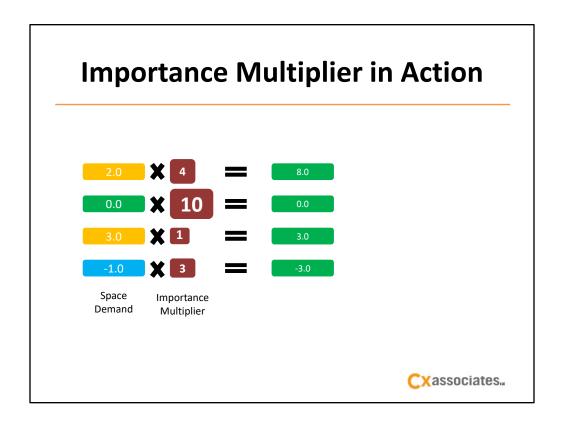

The math can look like this (VERY exaggerated numbers to show the concept)

All the space temperature demands are multiplied by their importance multiplier. Those values are summed and...

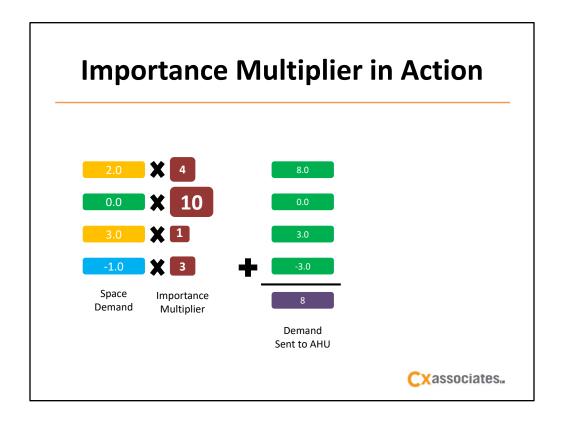

The total demand sent the AHU is determined to be 8.

There is also a time-based component that can be used here where request persisting more than an hour are also accumulated to increase their impact on the systems serving those zones.

Its called "Cumulative request hours"

<click>

Importance Multiplier Quick Review

- GL 36 uses an integer importance multiplier.
 - Requires user / designer input
 - Allows for future modification
 - Can default to 1 for all zones at turnover
 - Request hours Accumulation (trend this to find rogue zones)




Here's a quick review of the importance multiplier.

There is a lot of information that flows back and forth between zones and equipment.


Lets look at the final example of this closed loop control.

The requests we just talked about are used in a sequence called "Trim and respond"

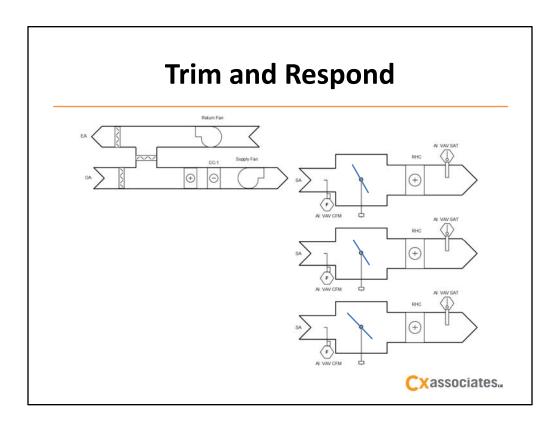

So the idea is to constantly reduce the setpoint at a fixed rate until a downstream zone is no longer satisfied and generates a call for heating/cooling or airflow.


Lets look at airflow for out example

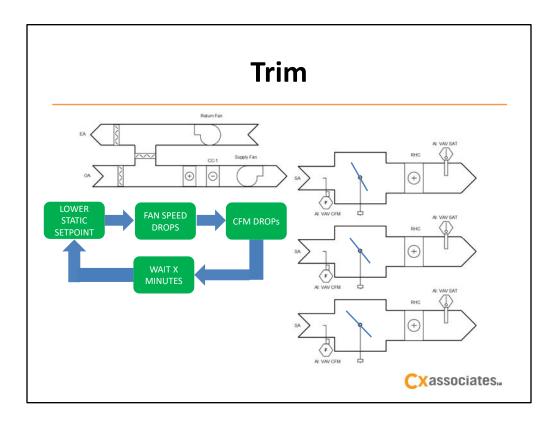

This is the Trim portion of Trim and respond.


It's the component that seeks to constantly lower the static pressure in the system. This creates fan energy savings.

The system can only trim to a point however, eventually there will be a down stream reaction.

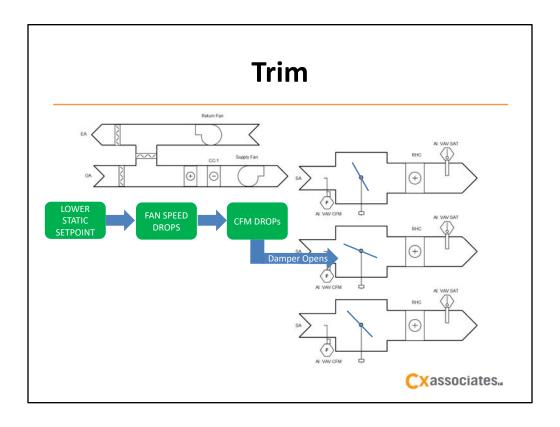


The damper crosses a positional threshold that the AHU looks for.

That VAV generates a Request for more static pressure.

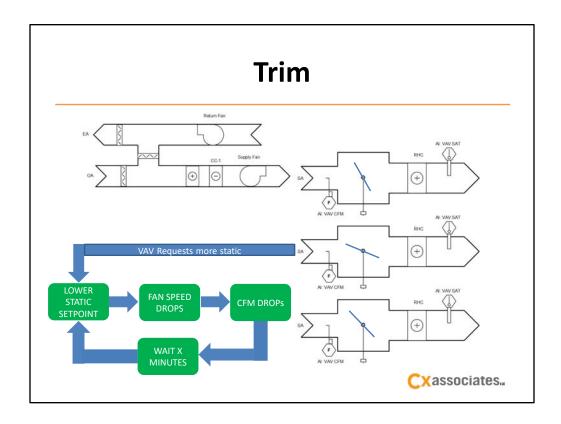


This request goes back to the AHU from the VAV (and is weighted via the importance multiplier).

Or rather the AHU controller polls the damper positions of all the VAVs and compares it to a value indicative of a "request" for more static.

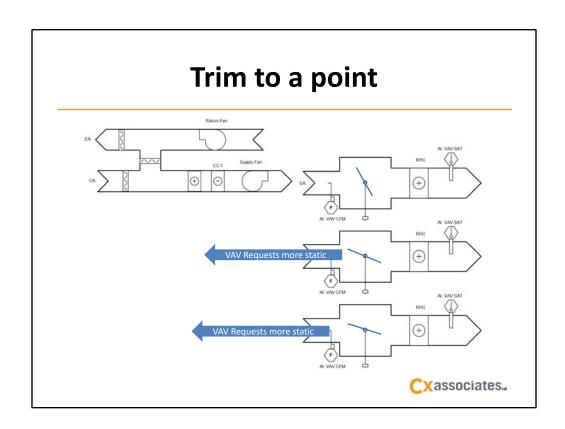


When enough dampers make this request (which is an adjustable value so you can cancel out the effect of rogue zones)

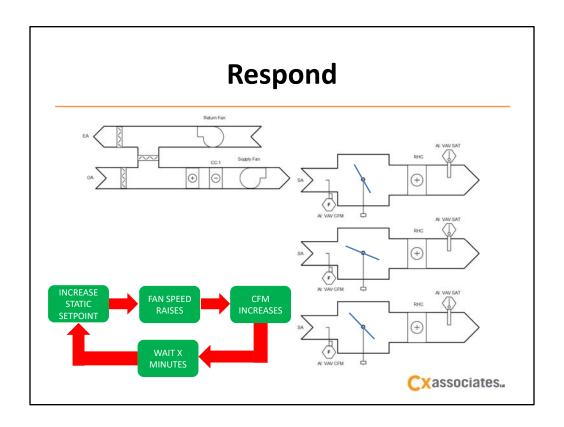

The system starts increasing static setpoint until the box requests are satisfied.

This is the "respond" portion of trim and respond.

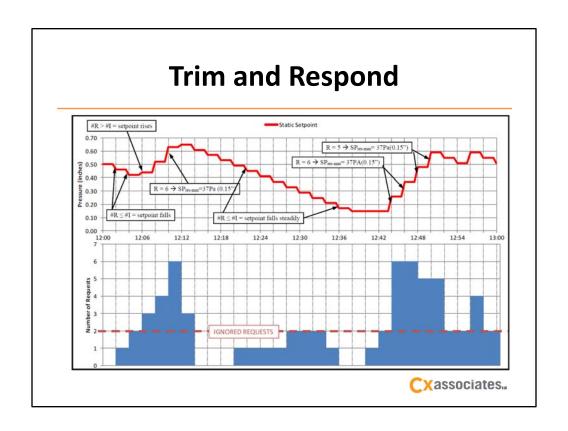

The net result is a low frequency oscillation of the setpoint

that we can accept because it reduces fan energy

when properly tuned without affecting thermal comfort or indoor air quality.

You'll notice it spends most of the time decreasing the setpoint and responds rather quickly by design.

From the Horse's Mouth

Trim & Respond logic resets a setpoint for pressure, temperature, or other variables at an air handler or plant. It reduces the setpoint at a fixed rate, until a downstream zone is no longer satisfied and generates a request. When a sufficient number of requests are present, the setpoint is increased in response. The importance of each zone's requests can be adjusted to ensure that critical zones are always satisfied. When a sufficient number of requests no longer exist, the setpoint resumes decreasing at its fixed rate. A running total of the requests generated by each zone is kept to identify zones that are driving the reset logic.

Trim and Respond logic is optimal for controlling a single variable that is subject to the requirements of multiple downstream zones (such as the static pressure setpoint for a VAV air handler). In this application, it is easier to tune than a conventional control loop and provides for fast response without high frequency chatter or loss of control of the downstream devices. It typically does generate low frequency cyclic hunting, but this behavior is slow enough to be non-disruptive.


See the end of this section for an example of T&R implementation.




You can use this same approach for supply air temperature control

Valve position and differential pressure reset in hydronic systems

Any system with one fluid mover or heat exchanger serving many downstream connected loads can be considered for trim and respond logic by an experienced engineer.

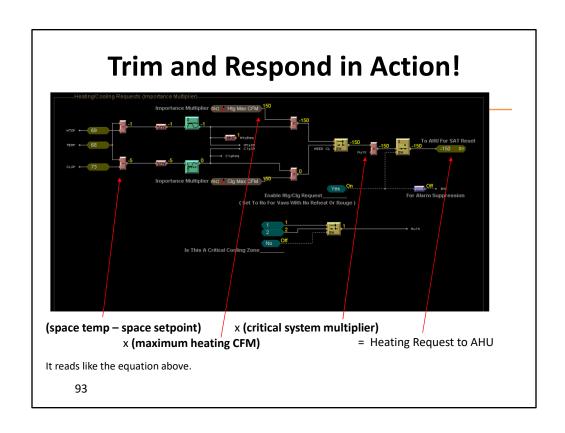

Here it is adapted for Fanny

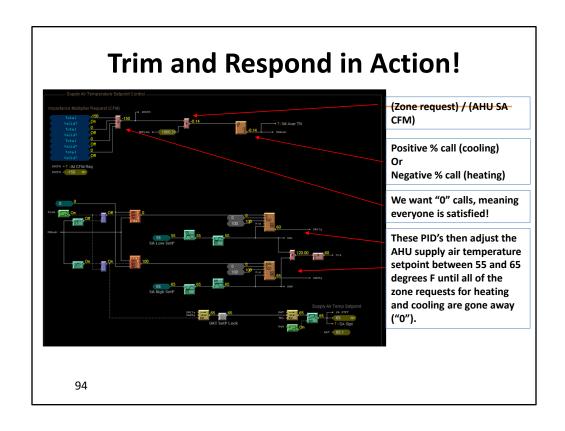

Here it is at the AHU level

Zone request / AHU SA CFM = 14% of the system served by this AHU needs more heating!

Trim and Respond – Lot's O' Variables

Variable	Definition
SP_0	Initial setpoint
SP_{min}	Minimum setpoint
$\mathrm{SP}_{\mathrm{max}}$	Maximum setpoint
T_{d}	Delay timer
T	Time step
I	Number of ignored Requests
R	Number of Requests from zones/systems
SP_{trim}	Trim amount
SP_{res}	Respond amount (must be opposite in sign to SP _{trim})
$\mathrm{SP}_{\mathrm{res-max}}$	Maximum response per time interval (must be same sign as SP _{res})





HVAC systems are dynamic, but they are slow (lab hoods not withstanding).


We don't want our AHU responding too quickly to requests just like we don't want our VAV box responding too quickly.

Both result in cycling or hunting and increase wear on components and result in poor space comfort or deficient air change rates.

Table is from GL 36 and lists all the variables that go into trim and respond. There is no calculus here, but there is more to it than just a 1 to 1 correspondence.

Trim and Respond, and closing the loops is applied to zone groups pretty heavily in Guideline 36 and at Fanny Allen.

The guideline provides instructions using the two basic zone types <next>

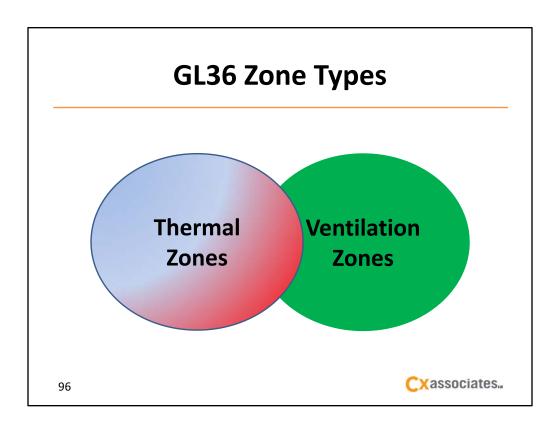


The guideline addresses thermal zones and ventilation zones directly.

Some Ventilation zones may share a thermal zone (think perimeter Fin Tube Radiation crossing zones with different VAVs)


Some Thermal zones may share the same ventilation zone.

Guideline 36 separates these two control strategies and provide guidance on both in terms of how they send signals up the hierarchy to close the control loop.

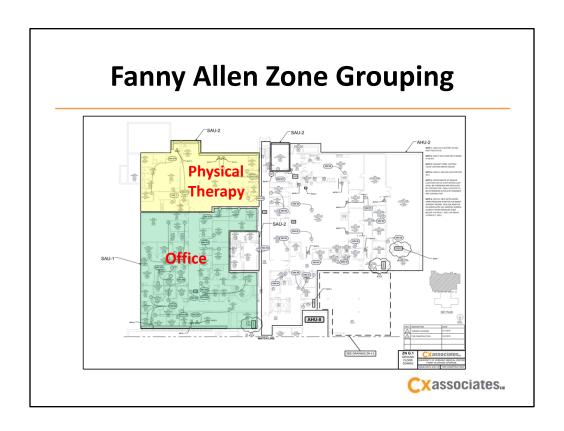

Here you can see two different zone groups at Fanny with very different purposes.


They will have different occupancy rates, different temperature requirements, and different ventilation rates.

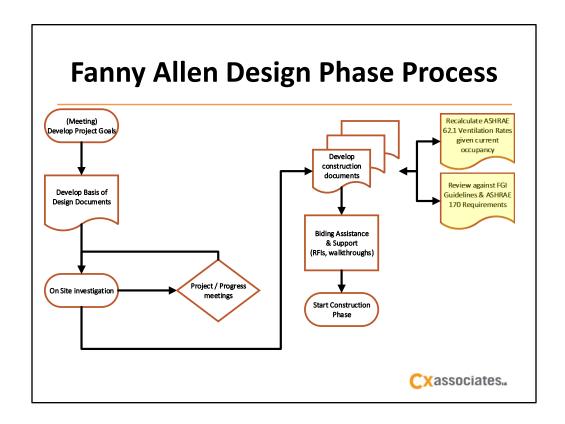

So while performing our survey we saw the opportunity to update the control of these zones.

We recalculated the ventilation rates to conform with the current space use, and occupancy.


Of course to do this we had to refer to ... <click>

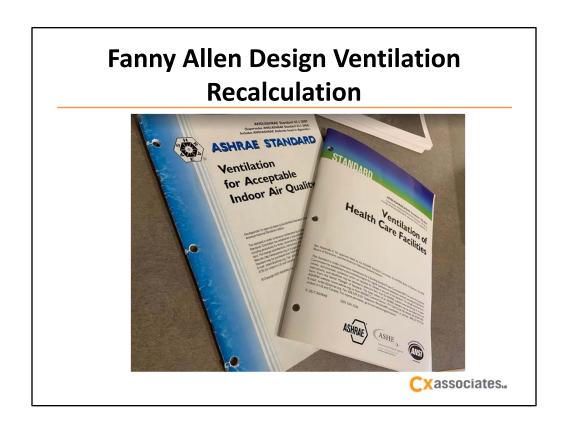


ASHRAE 170 and 62.1 ventilation standards.

Its rare in our industry to do a whole-building recalculation of these values.

Again, this was time intensive.

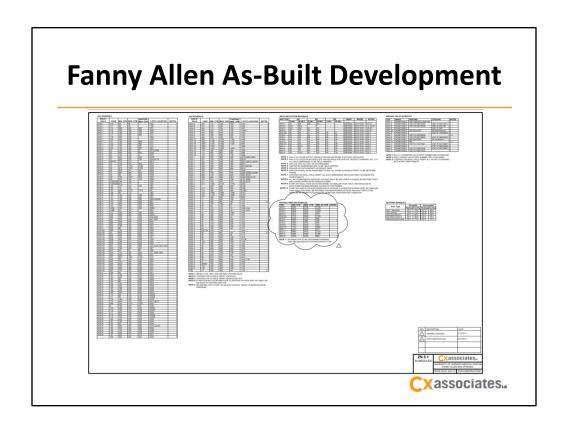

But in the end, UVMMC received a comprehensive inventory of all their Variable Air Volume controllers (VAVs) and a schedule of updated air flow values which would be used later on in the project to air balance the entire building.

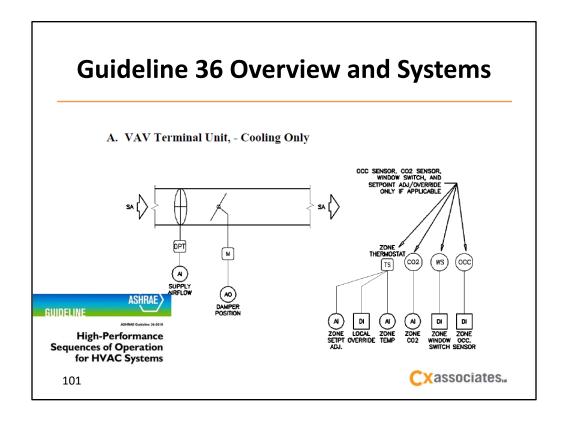


This also gave us a chance to figure out what types of VAVs and other terminal unit equipment we had to work with.

The guideline currently only provides air side systems sequences.

It provides point layouts for each system covered. <click>

Image Source: GPC36 PPR1 05-16-2016

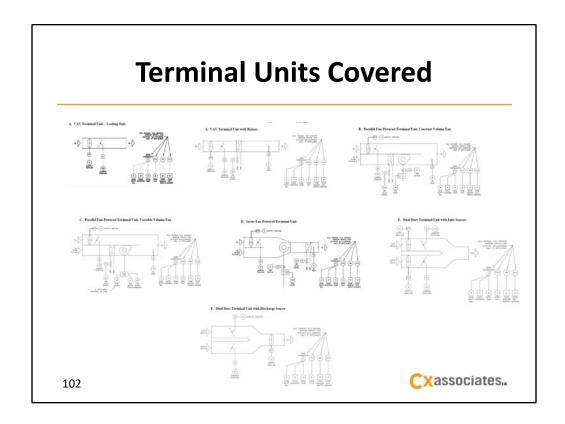

This is really nice because this allows both designers and implementers to standardize their layouts on each job.

You will always know what is expected and common hardware for your application.

The Guideline Covers

- A) VAV Cooling only
- B) VAV with reheat
- C) Fan Powered Terminal Unit (Series or parallel, Constant or variable speed fan)
- D) Dual Duct Terminal unit with inlet sensors
- E) Dual Duct Terminal Unit with discharge sensor

They are currently in the process of developing plant sequences.

Fanny had a majority of VAVs with reheat and Fan Coil units for inpatient spaces.

Image Source: GPC36 PPR1 05-16-2016

Rick



Lets talk a bit about Guideline 36's Zone Control Details.

Conventional

PART 2 PRODUCTS - NOT USED

PART 3 EXECUTION

- 3.1 AIR TERMINAL UNITS
 - A. Single-duct Variable Volume:
 - 1. Cooling with Reheat:
 - On a rise in space temperature above the cooling set-point, the unit modulates to its maximum airflow.
 - As the space temperature falls below the cooling set-point, the unit modulates to its minimum airflow.
 - As the space temperature continues to fall to the heating set-point, the terminal modulates to its heating minimum airflow.
- 3.2 CHILLED WATER SYSTEM
 - A The chilled water system consists of an existing air source chiller relocated to the roof with an

104




This is what I've seen for VAVs as a commissioning agent. I have seen sequences this simple from several design firms.

Note:

- All control is based on deviation of space temperature from setpoint by some undefined amount.
- It implies a proportional deviation, but they could also be implying a type of differential control (Thermostatic) for the cooling side.
- Although they make use of a minimum heating airflow, they do not give direction as to when to use the reheat and how to use reheat.
- This leaves a lot in the hands of the control's contractor.
- Not that they can't handle it, but there is a diverse amount of experience within a controls company and you might not always end up with the veteran on your project.

Graphed, this sequence looks like this <click>

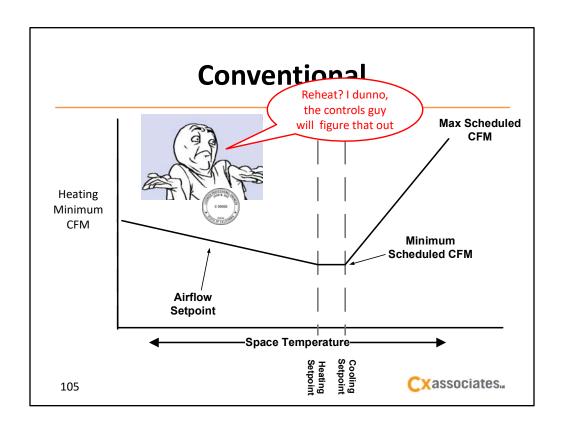

They didn't own their building system's energy usage.


Notice that didn't direct the controls contractor on how the reheat is to be controlled <click>

leaving it up to interpretation (or just do what you always do).

GL36 VAV with Reheat state is heating, the heating loop erature at the heating set point as the heating set point as heating sequence is to minimize the heating sequence is to minimize to distinct the heating sequence is to minimize to the heating sequence is to minimize the heating sequence is to minimize to the heating sequence is to minimize the heating sequence is to during closed periods. 5.6.1 See "Generic Thermal Zones" (Section 5.3) for set points, loops, control modes, alarms, etc. 5.6.2 See "Generic Ventilation Zones" (Section 5.2) for calculation of zone minimum outdoor airflow. 5.6.3 See Section 3.1.2.2 for zone minimum airflow set points Vmin, zone maximum cooling airflow set point ption by first increasing the SAT old DATs if the AHU is providing to the eating hot-water plant will start when the flow, and only increasing the thisfy the zone. **Tistly the zone** **Tistle the Vocol-max, zone maximum heating design airflow set point Vheat-max, and the maximum DAT rise above heating set point MaxAT. neating-loop output shall reset the set point from the current AHU imum of MaxΔT above space temairflow set point shall be the heat-max to is greater than zero, generate a feet requests are used in T&R loops to construct a sit less than 50% of set point for 5 at is greater than zero, generate a sit of the sit greater than zero, generate a sit of the 5.6.4 Active maximum and minimum set points shall vary depending on the mode of the zone group the zone is a part of (see Table 5.6.4). max to is greater than room teming-loop output shall reset ting minimum airflow set fing minimum airflow set fing minimum airflow set point. Figure filow set point. Ele oper-Directly controlling heater rol loop is not acceptable). Directly controlling heater rol loop is not acceptable). Directly controlling heater rol loop is not acceptable). Directly controlling heater rolling heater rolling is not acceptable). Directly controlling heater rolling is not acceptable). These sequences use different maximum airflow set points for heating and cooling. This dual-max logic allows the minimum neating and cooting. Institution and institution are distincted in the lower than in a conventional sequence where the minimum airflow equals the heating airflow. Heating is nonzero in cooldown to allow for individual zones within a zone group that may need heating while the zone group is in cooldown. sorp is not acceptable). o. It nearum nos-water paint is proven ox, and the DAT is reported and the supercission as the second of the cooling loop is greater than 95%, send 1 for cooling loop is greater than 95%, send 1 for cooling loop is greater than 95%, send 1 for cooling loop is greater than 95%, send 1 for cooling loop is greater than 95%, send 1 for cooling loop is less than 95% for limiture, such 35% for limitur The warm-up and setback minimum set point is set to zero to ensure spaces that do not want heat during these modes receive no air; because the supply air temperature can be warm in these modes if the AHU has a heating coil, any minimum could cause overheating. The heating minimum is set to a. If supply air temperature from the air handler is greater than room temperature, cooling supply airflow set point shall be no higher than the minimum. 5.6.5.2 When the zone state is deadband, the active airflow set point shall be the minimum airflow set point. Heating coil is disabled unless the DAT is below the minimum set 106 point (see Section 5.6.5.4).

Here is the text for the GL36 VAV with reheat,

The highlighted bits are the sections about thermal zones, ventilation zones, and air flow setpoints which I didn't' include in these images

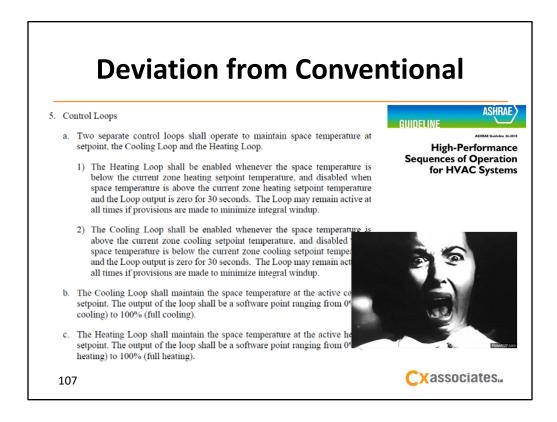

Under Guideline 36

Each zone is required to have two separate PIDs controlling the space temperature! One for heating and one for cooling!


This tends to be a shocker <CLICK> for some who are very comfortable with the "keep it simple approach"

There is a benefit to this!

- Your cooling response isn't the same proportionally as your heating response
- You can tune your cooling control differently from the tuning of your heating control (because you have two PIDs!) on a space by space level.
- PIDS create a demand signal based on a proportional deviation but they also respond to how long you've maintained that deviation!
- You respond to heating and cooling DEMAND,

Some of you might be thinking "How do you prevent the two loops from battling for control of the space?"


<next>

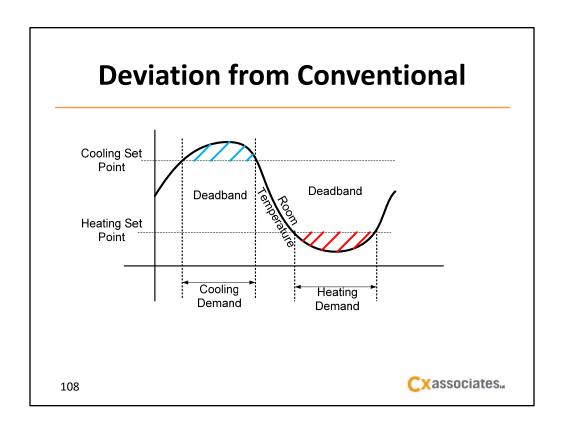

The Guideline specifies when you enable / disable the loops to prevent a tug of war.


They're only enabled when the space temperature floats outside the dead band as shown in the colored areas here.

This is important because your control product has to allow for a programmer to stop a loop from calculating or winding up.

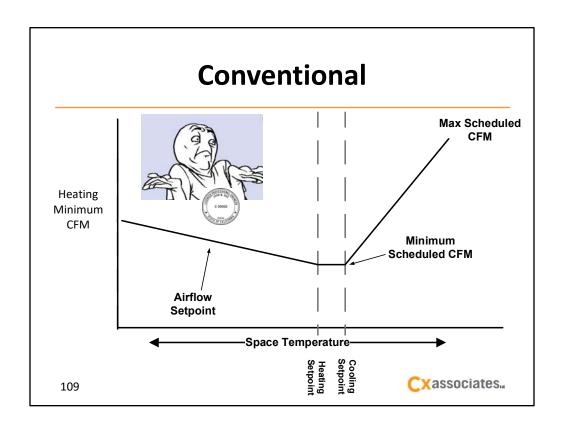

So remember this sequence?


This is what it looks like with Guideline 36: <click>

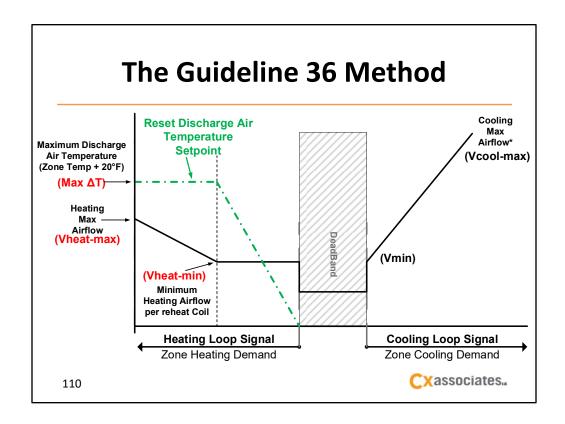

So you can see that the x axis has changed to be two arrows going away from deadband. This represents the percentage output of each of two required PIDs.

Notice that green part of the sequence calling for a calculated discharge air setpoint (called a reset setpoint in industry parlance).

<next>

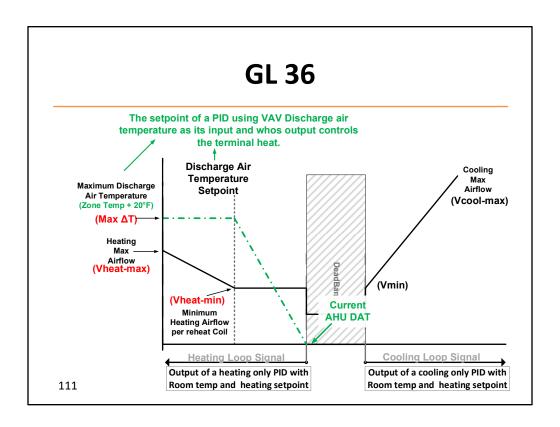

One other cool caveat in the sequence is that if the AHU DAT is greater than room temperature, the cooling supply air setpoint is locked at minimum.

Also the guideline prescribes cascading PIDs.

That's to say that the output of the zone heating PID feeds an input of another PID.

The output of the zone heating demand is scaled to calculate the discharge air temperature setpoint.

That setpoint is used by the heating control valve PID to maintain DAT out of the box at the reset DAT setpoint.

The calculated DAT setpoint is dynamically limited in its range.

The lowest DAT the box can achieve is current AHU DAT.

The maximum DAT value is based on maintaining ventilation distribution effectiveness.

What do I mean by that?

In ceiling supply and return the VAV max DAT is locked to space temperature +20 degrees so that you do not have to bring in more fresh air from the AHU (as called for by ASHRAE

62.1).


So right off, you can see that the guideline requires at least 3 PIDs for temperature control.

This really minimizes the use of terminal heating across every VAV in your system.

Deviation from Conventional				
4.2	VAV Terminal Unit with Reheat	t		
Re- quired	Description	Type	Device	
R	VAV Box Damper Position	AO OR two DOs	Modulating actuator OR Floating actuator	
R	Heating Signal	AO OR two DOs	Modulating valve OR Floating actuator OR Modulating electric heating coil	
R	Discharge Airflow	AI	Differential pressure transducer connected to flow sensor	
R	Discharge Air Temperature	AI	Duct temperature sensor (probe or averaging at designer's discretion)	
R	Zone Temperature	AI	Room temperature sensor	
A	Local Override (if applicable)	DI	Zone thermostat override switch	
A	Occupancy Sensor (if applicable)	DI	Occupancy sensor	
A	Window Switch (if applicable)	DI	Window switch	
Α	Zone Temperature Setpoint Adjustment (if applicable)	AI	Zone thermostat adjustment	
A	Zone CO2 Level (if applicable)	AI	Room CO ₂ sensor	Jiat

You can also see that the Supply Air temperature sensor is mandatory.

This one low cost sensor provides a lot of value within your control system.

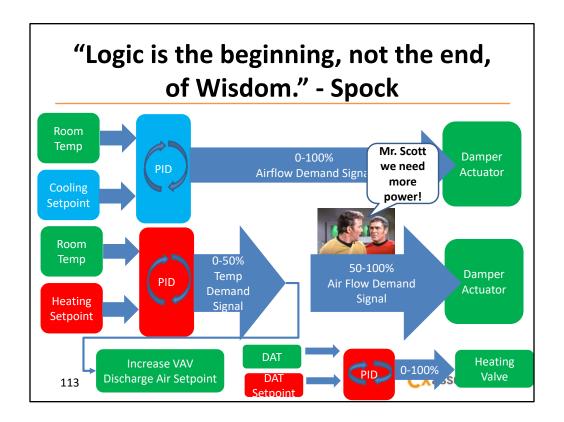

The cooling PID, on a call for cooling is activated and drives the VAV from min cooling flow (or min flow) to max flow.

The heating PID on a call for heating

First stage (50% of PID output) increases the DAT setpoint which


Drives the heating valve open without changing flow

Then on a call for more heating (as the PID winds up more) <click>

The VAV modulates the damper open to heating max air flow (which is different from Cooling Max Flow).

Image Source:

https://jameskillough.files.wordpress.com/2012/04/scotty.jpg Rick

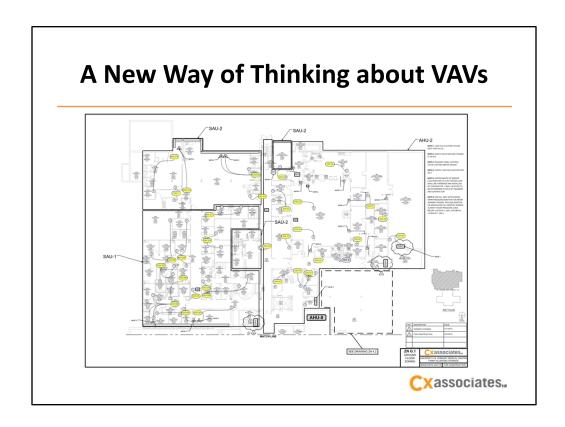

So now all this logic is packed into each of the these VAVs.


And this is only half of one floor of the building.

Each VAV is looking to minimize air flow and minimize reheat energy by responding to demands.

Each VAV can be fine tuned to uniquely address its space's needs.

And each VAV is affecting the air handler by making requests for heating/cooling changes in static pressure.

So to recap:

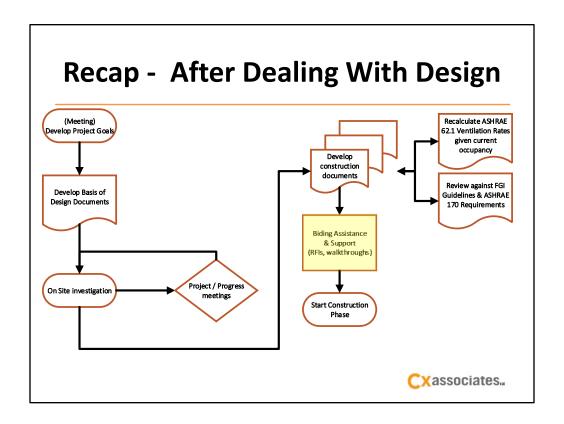


We had put this work into the design.

We had made the set of drawings and recalculated the air flows.

We developed a comprehensive spec for Fanny to use for bidding.

Then CxA assisted in contractor selection by providing bidding assistance.

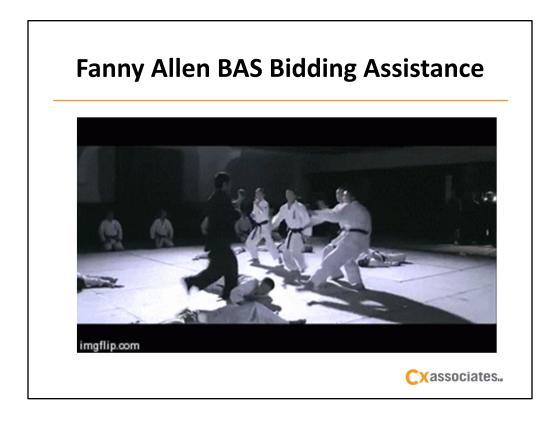


The team solicited bids from 4x companies in the area. And tested each of their skill/abilities

•••



With an interview,

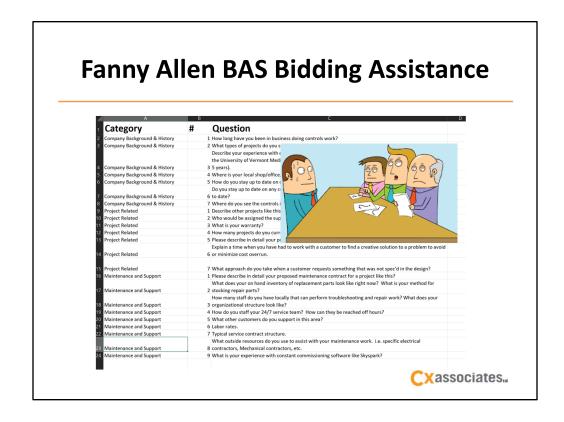

We setup a matrix of questions and answers and had the Fanny staff record answers along with our engineering staff.


These interviews dove into the following areas:

- 1. Understanding their experience in healthcare
- 2. Understanding their experience with controls retrofits (this was NOT new construction)
- 3. Experience with SkySpark, a product chosen by UVMMC to perform fault detection diagnostics
- 4. Future maintenance options (service contract) after the project is complete

we also had to factor in product.

At that time we knew 2 of the 4 contractors would likely install a tridium system.

Tridium was at the end of a product life cycle.

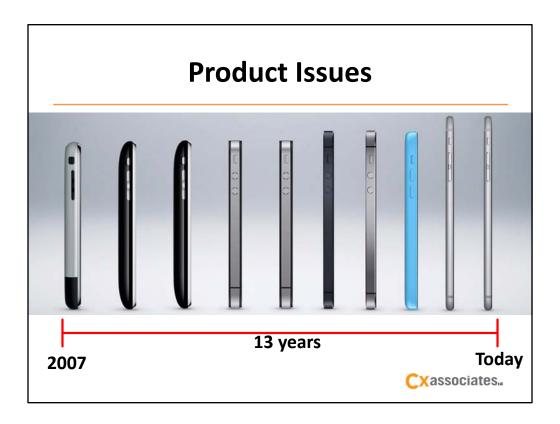


Every control system out there is released in a generational progression the same way smart phones are released.

If you know you need to replace your phone, but in 2 months the next phone will come out for the same price what do you do?


This is important to consider with BAS systems since they have a generational life cycle of about 10 - 15 years depending on the manufacturer.

Meaning if you buy the BAS 2 years before the newest one comes out – your essentially purchasing a brand new, OLD system.

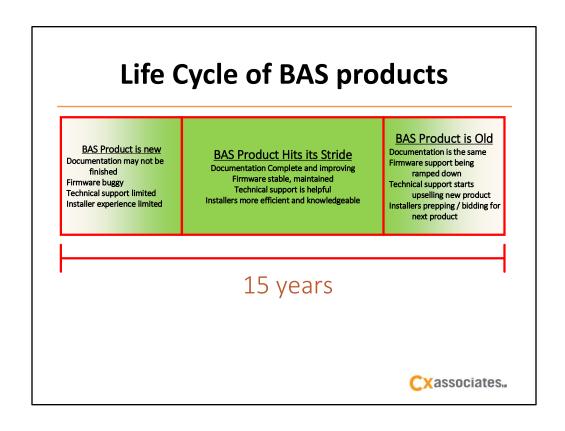

This graph is entirely made from my experience.

However I think a lot of controls folks would agree that this is on average the way a product's life cycle goes over a course of 15 to 20 years

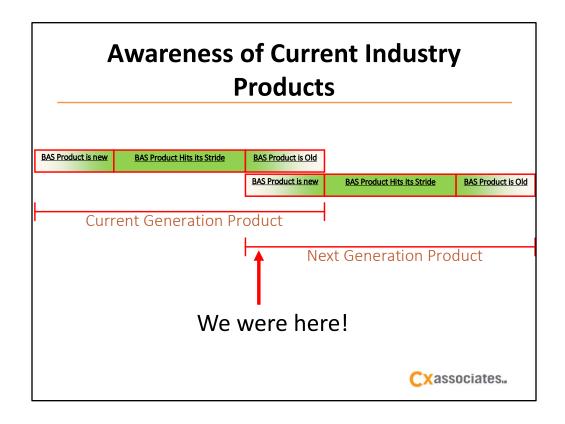

We were here with Tridium systems. We knew the old Ax Software was at the end of its product life and they were going to release the next generation products (Niagara 4) the same year the upgrade occurred.

We asked our bidders about how they would handle this and worked some caveats about this into the specification to ensure Fanny wouldn't receive a brand new "old product".



Each contractor provided their bid after the project walk throughs and interviews


They bid on our 26 page BAS controls design drawing set including 11 pages of floor plans,
MEP equipment locations,
zone data,
and a comprehensive updated as-built schedule of VAVs with new ventilation rates.

We had developed a 174 page specification that avoided boiler plate nonsense

Then the bids came in.




- These are not the actual numbers of course, this is normalized to abstract the pricing. However it shows on a percentage basis how close the bids were to one another.
- In the end, UVMMC made a chose based on criteria other than lowest first cost.
- The hard work and time spent developing the specification, and really doing the homework on site paid off.
- The #4 knew the building really well which is why their cost was higher!!!
- Anyone in the industry can suffer from having two much knowledge!

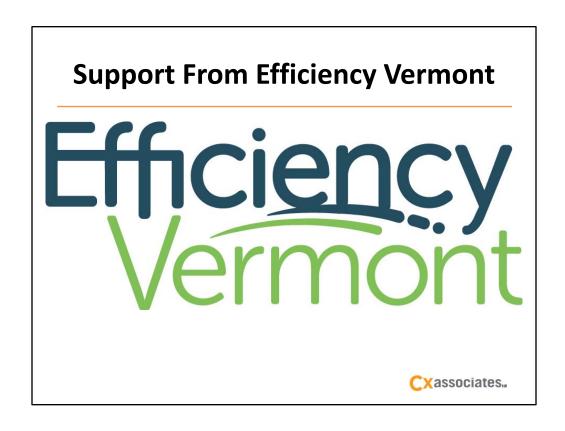


• At this point, the team was working with Efficiency Vermont to establish energy efficiency incentives for the project.

Cxassociates...


• They provided support for commissioning

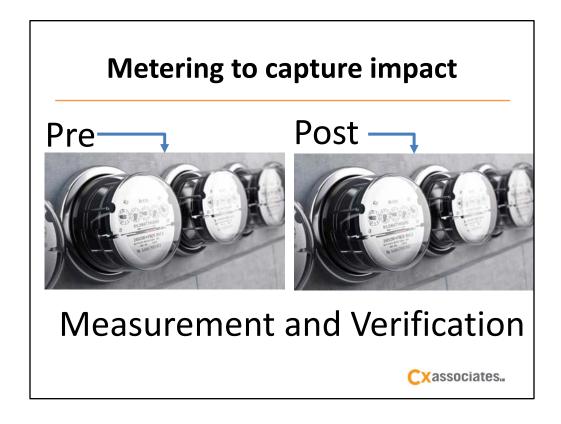

- They supported the measurement and verification and created a performance-based incentive.
- Their support really helped with this project.

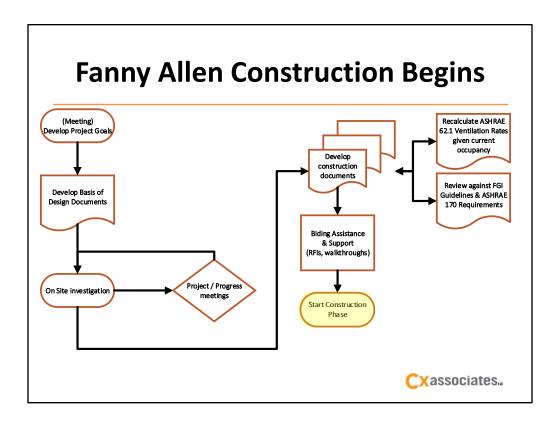

The bid was selected and construction started.

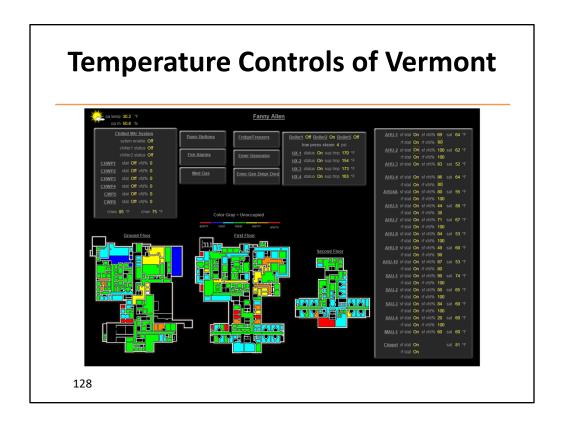

TCV won the contract and was brought into the team.


Healthcare Risk Assessment




- Affects every area of hospital
- Coordination with:
- Health and Safety Department
- Infection Prevention Department
- Approach for mitigating issues:
- Off-hours work
- Follow protocol for sensitive areas
- Proper clean-up
- Communication with key staff members

129

- 1. Most, if not all work was completed off-hours when the majority of occupants were not there.
- 2. In critical areas (operating rooms and patient rooms), a glove-bag approach (similar to what is done with asbestos removal) was used for installing new thermostats, which requires cutting into sheetrock walls. This method helped with containing all debris and material in the bag.
- 3. Proper cleaning by our environmental services group was coordinated before the room/space was turned back over to the staff.
- 4. Because it was off-hours work, it was important to communicate when work would occur with key staff members.

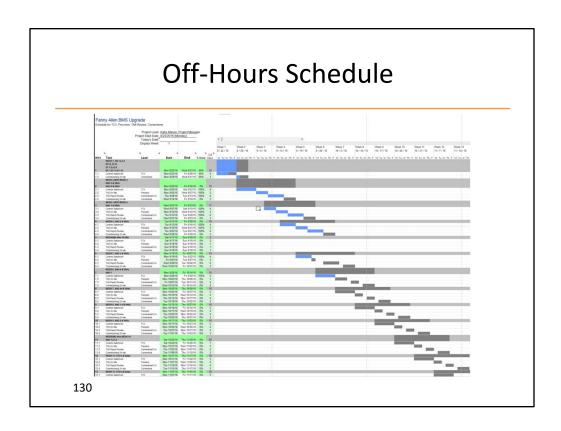

- 1. The schedule was phased, and each week the TCV team would check in with the Fanny Team.
 - 1. There was a deep level of involvement
- 1. Because of this effort the hospital never shut down.

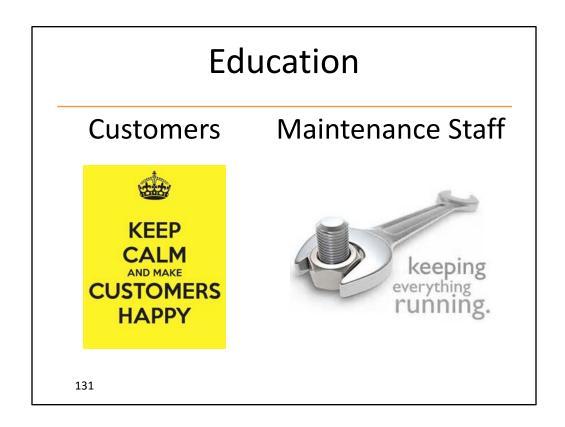

Lots of work was done for in house management of expectations. Everybody knows when a big upgrade is happening, even if controls are not the most visible type of work in a building.

The Maintenance group worked hard to control expectations and have contingency plans in place should something go wrong.

Education

- Phased Training
- Keep it Relevant
- Repetition

Maintenance Staff




133

It took a lot of relevant phased training and repetition to raise all ships in the harbor regarding the new way of operating and how to handle the upgrade as systems came online.

Operators had to learn the new sequences, the new interface, and new alarming.

Things like <click>

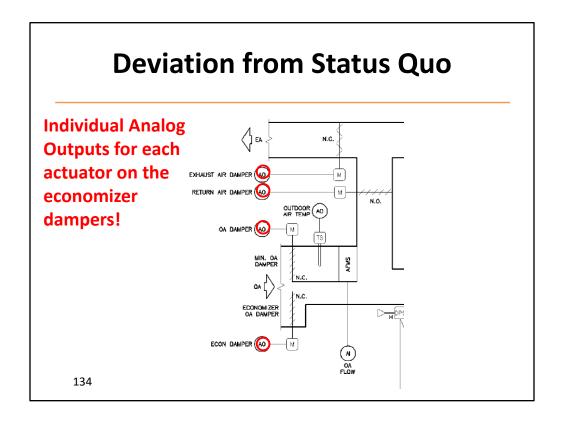


An example of this is

Learning a new mixing box control strategy.

Each damper of an economizer is now independently controlled to minimize mixing box pressure!

Image Source: GPC36 PPR1 05-16-2016

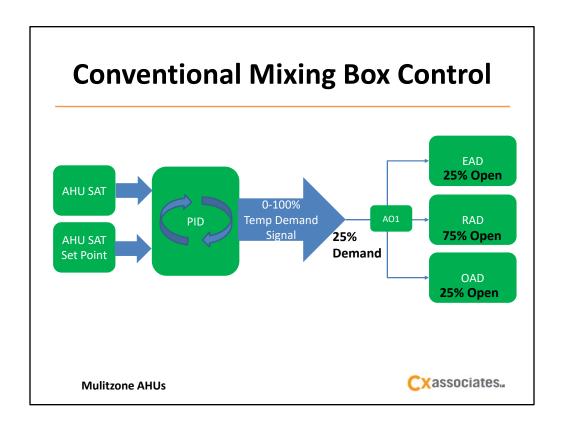


Here is a typical Mixing Box control

Here a PID looks at the difference between AHU SAT and setpoint and calculates a demand signal.

This is entirely the demand based on deviation of temperature from setpoint.

All three dampers react in unison to this deviation in temperature.


It looks like this when graphed: <click>

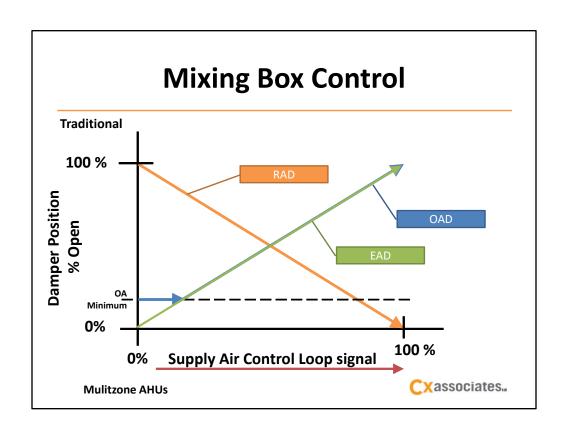

The dotted line is the minimum OA setting determined by the engineer to meet ASHRAE 62.1 requirements for ventilation.

Here you can see all three dampers react proportionally and simultaneously to that PID loop output.

Here is GL36's sequence:

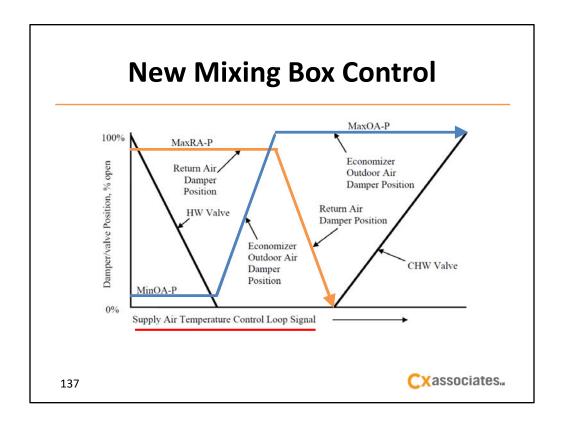

This mixing box control is very different from what you may have seen in the past.

Notice how they control based on supply air temperature demand

Staggered and sequenced.

Also notice that the variable names are different. That's because the GL gives recommendations on the maximum limits of these individual damper control strategies

The guideline also provides a secondary control sequence that will affect the dampers on OA intake control.

Image Source: GPC36 PPR1 05-16-2016

Rick


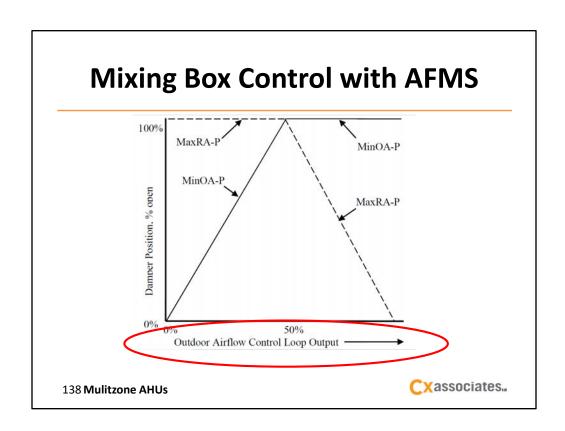


Image directly from GL36

Notice here that this is in response to Outdoor Airflow control (from the AFMS that we talked about earlier).

So there are two controlling process variables acting on the same set of dampers here, and its important to review both sets

of sequence verbiage and tweak the variable as described in the guideline.

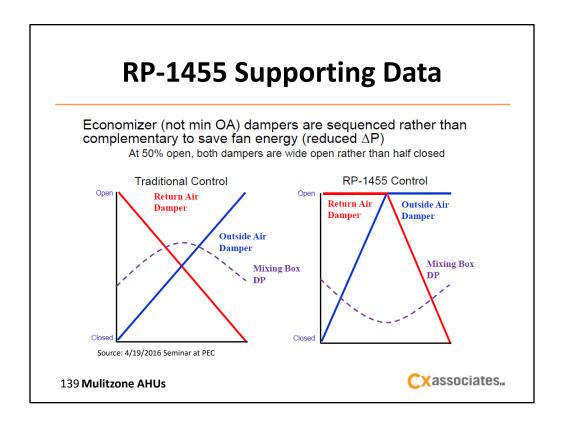

They did this because they wanted to reduce the mixing box pressure thus saving fan energy on the supply fan

These charts are from the research project they conducted to inform this new sequence.

You'll notice that at 50% demand (they indicated open here), both dampers again are wide open.

Notice the difference in pressure as graphed by the dotted line.

Another key item to point out for Guideline 36 which can cause a learning curve is...

ALL Adjustable

10. All setpoints, timers, deadbands, PID gains, etc., listed in sequences shall be adjustable by the user with appropriate access level whether indicated as adjustable in sequences or not. Software points shall be used for these variables. Fixed scalar numbers shall not be embedded in programs except for physical constants and conversion factors.

All hardware points, not just inputs, should be capable of being overridden for purposes of testing and commissioning. For example, the commissioning agent should be able to command damper positions, valve positions, fan speeds, etc., directly through Building Automation System (BAS) overrides.

The following requirement to equate hardware points to software points is necessary for systems that do not allow overriding real input points.




140



everything to be adjustable and overridable!

Image Source: GPC36 PPR1 05-16-2016 http://i.imgur.com/Waq9PDp.png

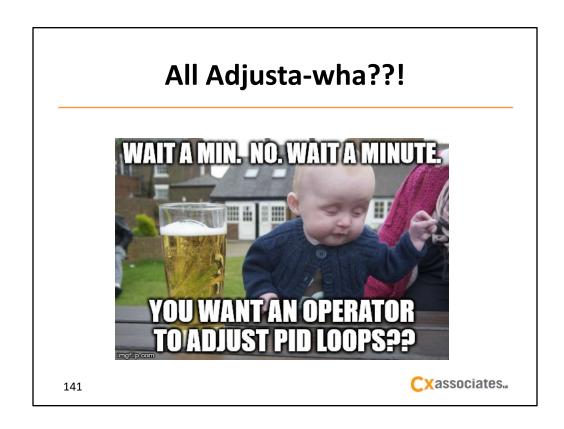

This concept of giving full control to operators of BAS systems can get a lot of people worked up.

Image Source: https://imgflip.com/memegenerator/Drunk-Baby




I've been a proponent of this concept for almost two decades. My argument is, "if you're paid to operate a car and have the key, ,,,



you better be licensed to drive."

Image Source: https://wildninja.files.wordpress.com/2014/05/bad-drivers-7.jpg

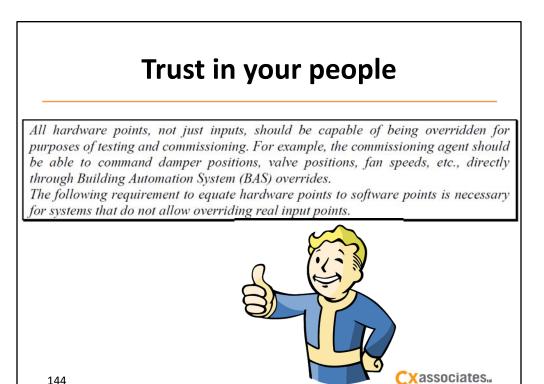


Testing, Tuning, commissioning, and troubleshooting benefit from this

If you hand this requirement out to a contractor, you can test and tune on your own.

Remember the contractor leaves, a building owner stays to deal with most of the system tuning whether they intend to or not.

So where does this leave us?

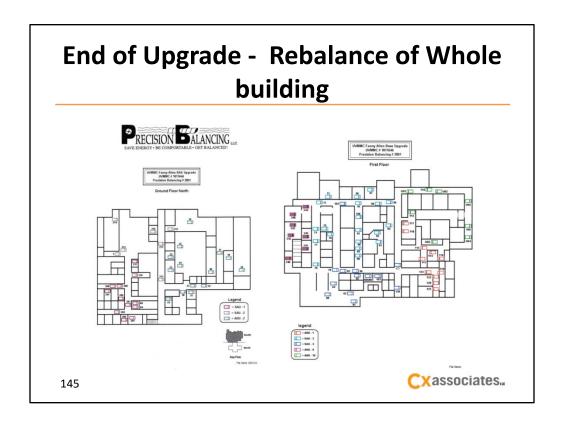

The end of the project!


As system were brought online, they balanced the entire building.

This is a very important step. It confirms airflows are correct against the recalculated values and ensures your control system is reading accurately.



During commissioning and the first year of operation we learned a few things from this real world implementation.

First and most importantly

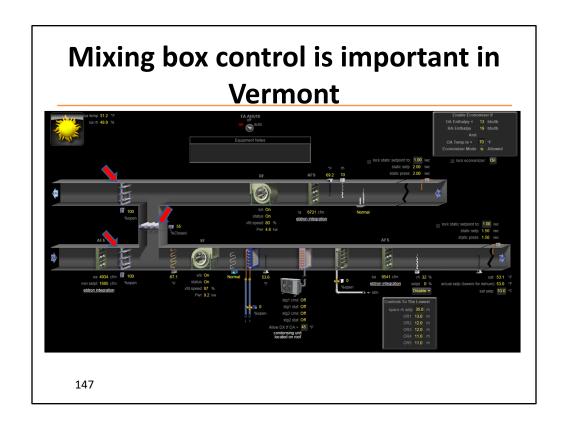


This slide illustrates A-36 mixed air box control.

The OA MOD opened up to 100%,

the EA MOD then opened up to 100%

and the RA MOD has opened to 45% open to maintain the supply air setpoint (1/10 away from setpoint).

You can see here that the mixing box is at 67.1°F showing that the ahu is favoring the return air over the outside air.

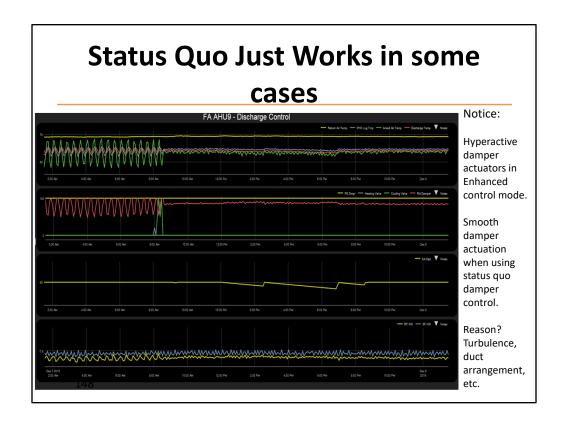


Here is a graph of when they decided to flick the switch and go back to status quo control.

The dampers were clearly oscillating constantly to maintain appropriate supply air setpoint.

Switching to traditional mixed air box control resulted in steadier supply air temperature with less wear and tear on the dampers and actuators.

A further test will be conducted of enhanced mixed air box control during warmer outdoor air temperatures to see if AHU-9 can automatically switch between mixed air box operating modes at about 25 - 30 degrees.

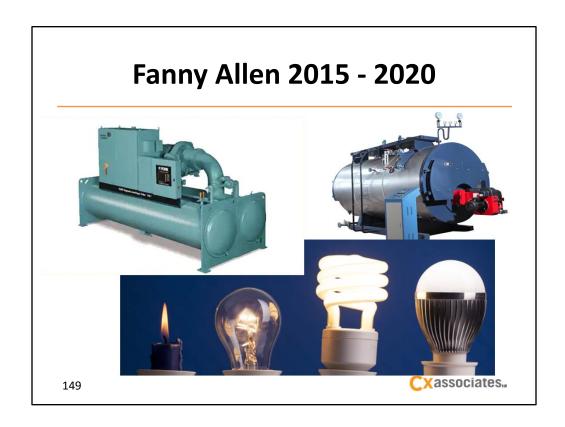


Since the BAS upgrade, Fanny has had

2016 - chiller replacement (300 Tons)
(replacing a steam absorption chiller with a modern screw chiller)


A LED lighting upgrade

And a hot water system upgrade including Grundfos pumps.

I think they also got a roll up MRI machine.

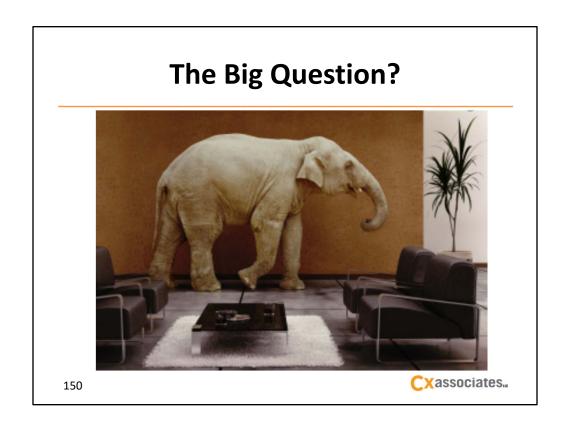


So did they save energy afterward?

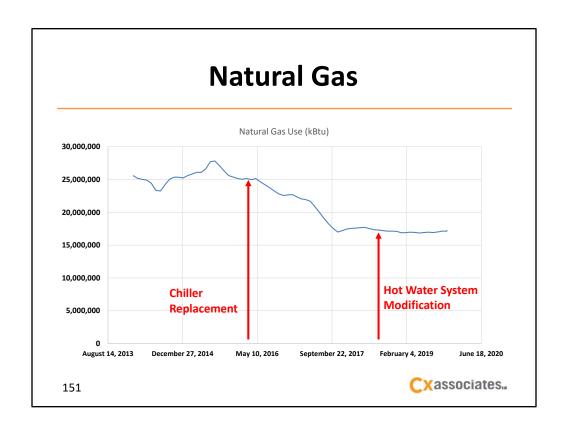


You can see a reduction in natural Gas consumption.

Some of this can be attributed to the loss of a steam fueled chiller, and hot water system upgrades.

Some of this can be attributed to the BAS upgrade as well.

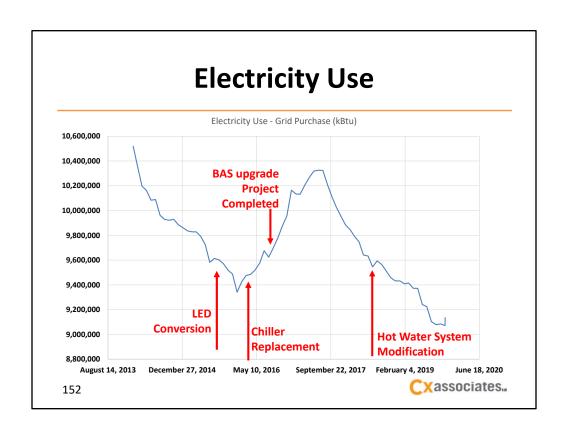


Again the same uncertainty is here due to lack of metered disaggregation, however I think all the projects in general are contributing.

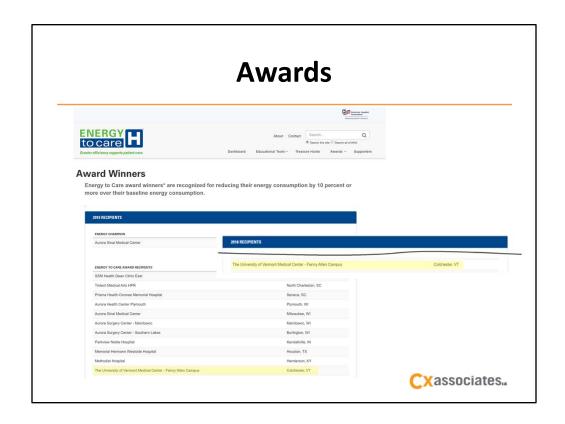

Fanny won Energy to Care 2018 for 10% reduction

Again in 2019 for 10% reduction

Because it's a specialty hospital its not eligible for an energy star award, however its improvement energy star score was is drastic.

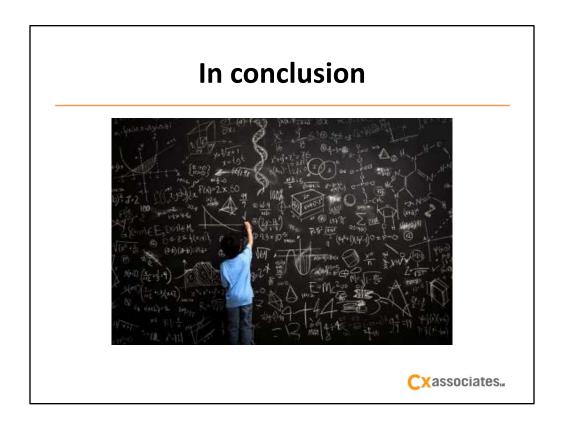

This success came together as a result of:

careful and constant planning

Doing the homework, checking as-built documentation and developing it if it doesn't exist.

Providing time and resources to get into the details of guideline 36 and fit it to your applications.

Ensuring that third party commissioning occurs to check that implementation matches the design as closely as your MEP systems will allow.

Building a team and communication with them, including owner, implementers and designers.

Guideline 36 is now officially released. Its going to continue to grow.

This is a complicated approach that is mainly software driven and therefore requires a new standard of rigor to verify after implementation.

However given that it is software driven, the implementation costs can be lower than hardware swap out if you're willing to do the hard work.

Building automation systems have environmental impacts of 20 years or more so all of this is worth it!

http://f.tqn.com/y/chemistry/1/W/s/P/2/168351254.jpg



